



MOTOROLA test equipment

portable test set

MODELS S1056A S1057A
S1058A S1059A

MOTOROLA


PORTABLE TEST SET

MODELS S1056A

S1057A

S1058A

S1059A

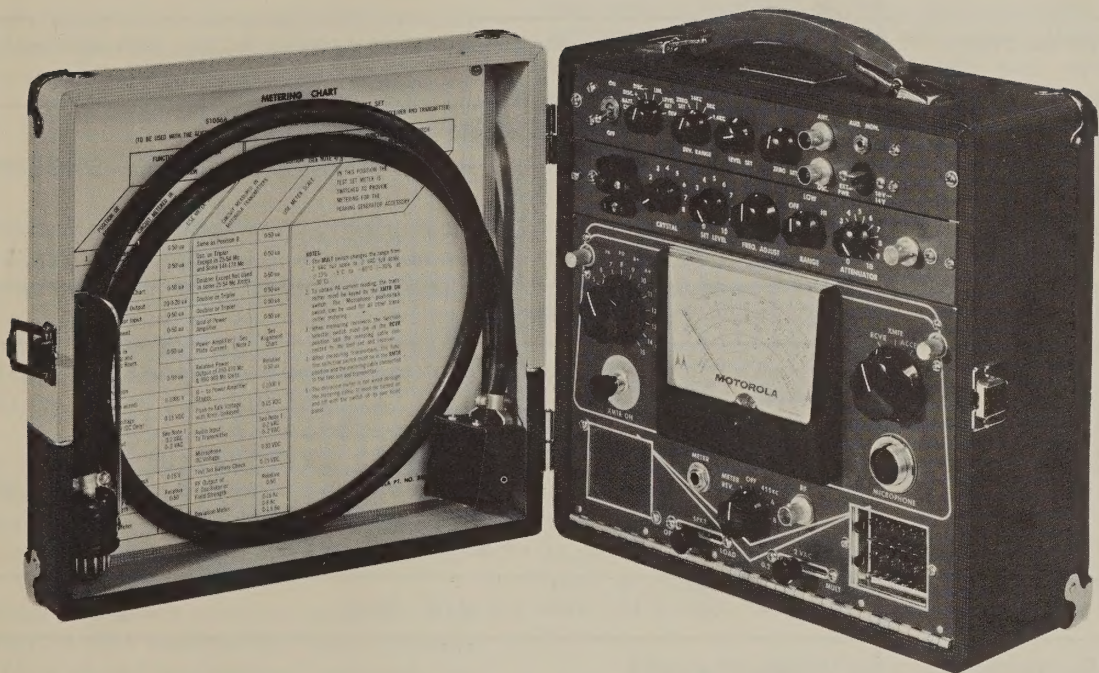

S1059A PORTABLE TEST SET

AEPD-7582-O (MC7696)



MOTOROLA INC.

COMMUNICATIONS DIVISION

Engineering Publications

4501 W. Augusta Blvd.

Chicago 51, Illinois

Copyright 1962 by Motorola, Inc.

Printed in U.S.A.

12/18/62-UM

68P81011A01

Issue - C

GUARANTEED PERFORMANCE SPECIFICATIONS

PORTABLE TEST SET

MODELS	S1056A, S1057A, S1058A and S1059A
ALIGNMENT	Metering facilities for alignment of receiver and tune-up of transmitter through a single, 11-pin plug and cable.
RECEIVER OUTPUT	Accurate measurement of output voltage for receiver quieting measurement. Self-contained PM speaker permits audio reception.
IF PEAKING	Transistorized i-f oscillator provides output from 350 kc to 13 mc when used with appropriate crystals.
CRYSTAL TESTING	Activity of crystals between 350 kc and 13 mc may be checked.
FIELD INTENSITY METER	Relative values of the r-f field intensity radiated from the transmitter antenna may be measured.
RF WATTMETER	Accurate measurement of transmitter power output with optional calibrated dummy load.
METER	0-50 microamps; 2% full scale accuracy
TRANSISTOR COMPLEMENT AND FUNCTION	(1) oscillator (2) AC voltmeter ampl.
POWER SUPPLY	four 1-1/2 volt "D" batteries
AC VOLTMETER	Accurately measures audio input to transmitter and audio output of receiver Range: 0 to .2 v a-c; 0 to 2 v a-c Frequency Response: ± 1 db from 35 cps to 5000 cps Input Impedance: 2 v range 400,000 ohms; .2 v range 40,000 ohms Stability: -1 db from -5°C to $+60^{\circ}\text{C}$ -3 db at -30°C
SIZE	12-1/2" high x 12" wide x 6-1/2" deep
WEIGHT	11 lbs.

FOREWORD

NOMENCLATURE

Motorola radio equipment is specifically identified by the model number on the nameplate.

NOTE

Be sure to use the entire model number when making inquiries about your equipment.

Identifiers have been assigned to chassis and kits. Use these identifiers when requesting information or ordering replacements.

PRODUCTION CHANGES

When production and engineering changes are incorporated into the equipment, a revision numeral is assigned to the chassis or kit affected.

Typical Example:

The Model NTD6041AA becomes NTD6041AA-1 with the first revision.

This chassis number complete with revision numeral, if any, is stamped on the chassis at the time of production. The revision numeral becomes an integral part of the chassis identifier.

A schematic diagram number complete with its issue letter is also stamped on each chassis. This establishes direct correlation between the chassis and its schematic. The schematic issue is advanced each time a change occurs in the chassis.

INSTRUCTION MANUAL REVISIONS

Changes which occur after an instruction manual is printed are described in the Instruction Manual Revision. These bulletins give the reader complete information on the change including pertinent parts listing data.

NATIONAL SERVICE ORGANIZATION

Motorola provides a nation-wide service organization. Through its maintenance and instal-

lation program Motorola makes available the finest service to those desiring reliable continuous communications on a contract basis.



The largest service organization specializing in mobile communications is Motorola's National Service Organization. Over 800 strategically located, adequately staffed and trained, independently owned and operated stations, manned with several thousand FCC licensed personnel constitute the sub-contracting force.

The administrative forces of area and district service managers and district service representatives are in the direct employ of Motorola.

For your contract service requirements, please contact your local Motorola representative or write to:

National Service Manager
Motorola Communications Division
4501 W. Augusta Blvd., Chicago 51, Illinois

REPLACEMENT PARTS ORDERING

Motorola maintains parts and service depots and authorized service stations strategically located throughout the country. These facilities are fully equipped to give the finest service.

When ordering replacement parts, the complete number identification of the item must be used whether it be a component, kit or complete chassis. This will fix proper identification and insure receipt of the desired item. Complete number identification should also be used when requesting equipment information.

Crystal orders should specify crystal type number, crystal frequency, carrier frequency and the chassis model number in which the crystal is to be used.

CAREFUL USE OF THE INSTRUCTION MANUAL AND THE MANY SUGGESTIONS CONTAINED IN IT WILL FURTHER INSURE PROPERLY INSTALLED AND MAINTAINED RADIO EQUIPMENT.

THE EQUIPMENT DESCRIBED IN THIS MANUAL IS MANUFACTURED UNDER ONE OR MORE OF THE FOLLOWING MOTOROLA U. S. PATENTS:

RE-24, 110	2, 602, 842	2, 738, 466	2, 809, 236	2, 918, 571
RE-24, 815	2, 608, 648	2, 740, 891	2, 810, 068	2, 924, 705
2, 404, 359	2, 608, 649	2, 743, 144	2, 830, 200	2, 925, 562
2, 439, 408	2, 626, 384	2, 743, 361	2, 833, 994	2, 938, 082
2, 439, 412	2, 637, 782	2, 750, 451	2, 834, 879	2, 963, 577
2, 472, 021	2, 650, 333	2, 759, 052	2, 835, 794	2, 966, 585
2, 524, 300	2, 662, 942	2, 759, 103	2, 852, 730	2, 968, 739
2, 524, 534	2, 688, 059	2, 770, 721	2, 860, 239	2, 974, 221
2, 547, 023	2, 691, 094	2, 777, 950	2, 883, 521	2, 984, 740
2, 547, 025	2, 691, 560	2, 784, 263	2, 888, 652	2, 994, 844
2, 547, 027	2, 699, 425	2, 799, 001	2, 899, 547	3, 009, 115
2, 566, 759	2, 705, 281	2, 799, 010	2, 901, 601	3, 014, 127
2, 583, 032	2, 731, 555	2, 808, 507	2, 912, 573	

Other U. S. Patents Pending

CONTENTS

<u>SECTION</u>	<u>NUMBER</u>
Specifications	Page ii
Model Chart	EPD-8143
TEST SET	68P81011A02
Introduction	Page 1
Accessories Supplied	Page 1
Metering Facilities.	Page 2
Controls	Page 3
Receiver Metering Procedures	Page 5
Transmitter Metering Procedures.	Page 6
Maintenance	Page 7
Controls Location Detail	EPD-7580
Metering Chart	EPD-7603
Printed Board and Wiring Diagram (test set)	EPD-7734
Simplified Circuit Diagram	EPD-7579
Schematic Diagram and Parts List	63E81011A03
PEAKING GENERATOR	68P81011A04
Description	Page 1
Guaranteed Performance Specifications	Page 1
Controls	Page 2
Calibration	Page 2
Output Circuits	Page 3
Operating Instructions.	Page 3
Crystals	Page 3
Installation	Page 4
Parts Location Detail	EPD-2974
Schematic Diagram and Parts List	63E81011A06
DEVIATION METER PANEL AND CONVERSION KIT	68P81011A07
Description	Page 1
Operating Instructions.	Page 1
Guaranteed Performance Specifications	Page 1
960 MC Transmitters	Page 4
Erroneous Indications	Page 4
Input Signal Requirements	Page 4
Audio Monitoring	Page 4
External Power Supply.	Page 4
Circuit Description.	Page 5
Calibration	Page 5
Maintenance	Page 6
Installing the Conversion Kit	Page 6
Printed Board and Wiring Diagram (RF and Audio Ampl)	EPD-7740
Printed Board and Wiring Diagram (455 KC IF Assembly).	EPD-7731
Schematic Diagram and Parts List	63D81011A08

MOTOROLA

MODEL CHART

FOR

PORTABLE TEST SET

CODE:

X = ONE ITEM SUPPLIED

2 = TWO ITEMS SUPPLIED

4 = FOUR ITEMS SUPPLIED

[illegible]

EPD-8143-O

PORTABLE TEST SET

1. INTRODUCTION

The Motorola Portable Test Sets provide the metering necessary to align and check Motorola transmitters and receivers in the 25-960 mc frequency range.

The test set housing is a convenient carrying case with a removable front cover. Clips mounted in the front cover hold the metering cable when carrying the test set. The accessories supplied with the test set can be stored in the meter protective cover, inside the test set, which is accessible by twisting the two quarter turn screws and opening the front panel.

The Model SLN6057A Peaking Generator, used in the S1057A and S1059A Test Sets, is available as a separate item for mounting in all models not equipped with a peaking generator.

The Model SLN1000A Deviation Meter Panel, used with the S1058A and S1059A Test Sets, is available in the Model S1062A Conversion Kit for mounting in all models not equipped with a deviation meter.

Operating voltage for the test set, is supplied by an internal 6 volt d-c source consisting of four 1-1/2 volt "D" batteries connected in series.

The test sets incorporate the following performance features:

- Direct reading multi-scale meter
- Transistorized a-c voltmeter
- Transistorized oscillator
- Selection of metering circuits in transmitters and receivers
- Zero center scale
- Peaking generator (included in Models S1057A and S1059A only or available as an optional accessory)
- Deviation Meter (included in Models S1058A and S1059A only or available as an optional accessory as part of the S1062A Conversion Kit).

2. ACCESSORIES SUPPLIED

All models include a metering cable, a 455 kc crystal, an r-f probe, r-f probe extension cable, r-f probe adapter and an accessory cable.

The metering cable has a 20-pin connector which mates with the receptacle on the test set and an 11-pin connector to plug into the meter receptacle on the receiver or transmitter being tested.



MOTOROLA INC.

Engineering Publications

4501 W. Augusta Blvd.

COMMUNICATIONS DIVISION

Chicago 51, Illinois

The 455 kc crystal is used for receiver i-f alignment. It plugs into a socket inside the test set.

The r-f probe is a shielded cable with a connector at one end which mates directly with the BNC connector on the r-f probe extension cable. The extension cable mates with the r-f connector on the test set to supply the required r-f for specific testing purposes.

The r-f probe adapter is used with the r-f extension cable to permit the cable to connect directly to the antenna receptacle on the radio set for the r-f source.

The accessory cable is described in paragraph 4e.

3. METERING FACILITIES

The test set meter is calibrated in six different scales. Metering Chart (EPD-7603) which is included with this instruction manual, indicates every meter scale and its application. This chart is largely self-explanatory; however, certain procedures cannot be fully explained on the chart and are described in text form under the RECEIVER METERING PROCEDURES and TRANSMITTER METERING PROCEDURES paragraphs of this instruction manual. All metering not explained in the text can be accomplished by following the metering chart and the alignment procedures described in the instructions supplied with the equipment being tested.

In a receiver, the following stages can be measured: last i-f grid, first limiter grid, second limiter grid, discriminator output, oscillator grid, first oscillator multiplier (450-470 mc and 890-960 mc equipment), second oscillator multiplier (450-470 mc and 890-960 mc equipment), B+ voltage, A+ or filament voltage and audio output.

In a transmitter, the following stages can be measured: multiplier grids, driver grid, final amplifier grid, PA plate current, relative r-f power output (450-470 mc and 890-960 mc equipment), B+ (highest B+ to final amplifier stage), push-to-talk relay voltage, audio input and microphone d-c voltage.

Other measurements which can be made are: internal batteries of the test set, r-f voltage from the i-f oscillator and relative field strength.

The meter scales and applications are as follows:

a. 20 - 0 - 20 ua Scale

The 20 - 0 - 20 ua scale is the top scale on the meter. The "0" center feature of this scale provides direct, accurate readings, both positive and negative, without switching meter polarity. This arrangement simplifies adjustment of receiver discriminator output and improves local oscillator tuning for exact "on-frequency" readings.

b. 0 - 50 ua Scale

The 0 - 50 ua scale is the second scale from the top of the meter. This scale is used for most of the transmitter and receiver alignment requirements. The metering chart indicates the various applications for which this scale is used.

c. 0 - 16 K. C. DEV. Scale

The 0 - 16 K. C. DEV. scale is the third scale from the top of the meter. This scale is used when measuring the deviation of transmitters with 15 KC channel spacing. This scale is also 0 - 1.6 KC and is used for measuring "Private-Line" tones on units equipped with this feature.

d. 0 - 8 K. C DEV. Scale

The 0 - 8 K. C. DEV. scale is the fourth scale from the top of the meter. This scale is used to measure the deviation of transmitters with 5 KC channel spacing.

e. 0 - 1000 Volt DC Scale

The 0 - 1000 volt d-c scale is the fifth scale from the top of the meter. This scale is used primarily for reading B+ voltages in transmitters and receivers.

f. 0 - 15 Volt DC Scale

The 0 - 15 volt d-c scale is the sixth scale from the top of the meter. This scale is used when measuring filament and relay voltages and also the internal power supply of the test set.

g. 0 - 30 Volt DC Scale

The 0 - 30 volt d-c scale is the seventh scale from the top of the meter. This scale is used primarily for measuring microphone d-c voltage.

h. 0 - 2 Volt AC Scale (0 - .2 Volt AC)

The 0 - 2 volt a-c scale is the bottom scale on the meter. This scale is used to measure the audio output of a receiver and the audio input of a transmitter. The meter sensitivity can be changed, by means of a switch on the front of the test set, to indicate a full scale reading of 0.2 volts a-c.

4. CONTROLS

All controls used for testing and aligning are located on the front panel of the test set. These controls are shown on the Controls Location Detail, number EPD-7580, which is included in this instruction manual, and are as follows:

a. Position Selector Switch

The position selector switch is a 15-position switch used to select the circuit to be metered. The correct switch positions are determined by the type of equipment being tested. The Metering Chart, EPD-7603, included in this manual, indicates the switch positions in relation to the circuits. Refer to the instruction manual supplied with the radio set for switch positions to be used.

The following chart shows the relationship between the selector switch positions of previous Motorola Test Sets compared with those of the Models S1056A, S1057A, S1058A, and S1059A. An asterisk in the chart indicates there is no switch position on the P-8500 and P-8501 series comparable to the S1056A-9A.

RECEIVER	P-8500 & P-8501 Series	1	2	3	+4, -4	5	6	-4 (see note)	5 (see note)	7	*	8	*	*	*	*
	S1056A-9A	1	2	3	4		5	6	7 PA	8 PO	B+ 9	A+ 10	Audio 11	12	13	14 15
TRANSMITTER	P-8500 & P-8501 Series	1	2	3	-4		5	6	+4	1	7	8	*	*	*	*
	S1056A-9A	1	2	3	4		5	6	7 PA	8 PO	B+ 9	A+ 10	Audio 11	12	13	14 15

Note: The K-9326 Adapter Plug must be used.

b. Function Selector Switch

The function selector switch is labeled RCVR - XMTR - ACCESS. The switch should be placed in the RCVR position when metering a receiver and the XMTR position when metering a transmitter. The switch should be placed in the ACCESS position when metering accessory equipment.

c. XMTR ON Switch

The XMTR ON switch is used when measuring transmitter power amplifier (PA) current. Transmitter PA current can be measured only by pressing the XMTR ON switch and not by operating the push-to-talk button on a microphone connected to the test set.

d. SPKR Switch

The SPKR switch is labeled OPEN - SPKR - LOAD. In the OPEN position, a 30 ohm load is placed across the receiver output. In this position, the speaker on the test set is in operating condition, at reduced level, and messages can be heard. The main function of this switch position is to set the GAIN control on a receiver from the trunk of an automobile without double-loading the receiver output. In the SPKR position, which is the normal position of the switch, the speaker on the test set is in operating condition and messages can be heard. In the LOAD position a 3 ohm resistive load is placed across the receiver audio output, which disables the test set speaker.

e. METER Phone Jack

The accessory cable supplied is used when metering certain types of Motorola equipment. The red plug on the cable mates with the METER receptacle on the test set; the black plug mates with the phone-jack on the receiver or transmitter being metered. Motorola equipment with a phone-jack metering receptacle has a switch on the receiver and transmitter chassis to select the circuit to be metered. The accessory cable is also used for measuring transmitter r-f power output with the P-7208 Series Dummy Load.

f. Oscillator and Metering Reversing Switch

The oscillator and meter reversing switch is labeled METER REV. - OFF - 455 KC - A - B.

The METER REV. position is used to reverse the polarity of the meter to provide an on-scale reading when the needle tends to indicate in the negative direction past zero.

The OFF position is the normal position used for most applications of the test set. If the switch is in the METER REV. position and then placed in the OFF position, the polarity of the meter will be reversed.

In the 455 KC position, a signal of 455 kc is generated by the test set. This signal is used for measuring the grid of the last i-f amplifier and the discriminator input of a receiver. A 455 kc crystal is supplied with the test set.

The A and B positions are also used for crystal selection. Position A selects the crystal inserted in the "A" terminals of the crystal socket in the test set. Position B selects the crystal inserted in the "B" terminals of the crystal socket in the test set. The oscillator in the test set is capable of operation up to 12 mc. Normally, the three crystals used will be 455 kc, 5.5 mc and 12 mc. These crystals will cover the three most commonly used i-f frequencies.

g. RF Connector

The output of the test set r-f oscillator is available at the r-f connector. The r-f extension cable mates directly with the RF connector. The extension cable is used to couple the signal into the antenna connector of the receiver under test. The probe is used to inject the signal into the various stages of the receiver, as required by the alignment procedure.

h. Multiplier Switch

The multiplier switch is labeled 0.2 VAC - 2 VAC - MULT.

The 2 VAC position is the normal position of the switch. The 0.2 VAC and the 2 VAC refer to the bottom scale of the test set meter. Normally the scale reads 2 volts a-c full scale. If the switch is placed in the 0.2 VAC position, the sensitivity of the meter will be increased 20 db and the scale will be 0.2 volts a-c full scale.

The MULT position is used only when measuring the oscillator multipliers in 450-470 mc and 890-960 mc equipment.

CAUTION

DO NOT use the MULT position for metering 25-54, 72-76 or 132-174 mc receivers. These receivers do not have oscillator multipliers; the meter could be damaged in the MULT position with these receivers.

i. MICROPHONE Connector

The MICROPHONE connector is a four-pin female receptacle which mates directly with any Motorola microphone (or equivalent) which has a four-pin male microphone connector.

j. Metering Socket

The metering socket is a 20-pin male plug. The metering cable, supplied with the test set, connects directly to the metering socket.

k. Speaker

The speaker is used for all applications which may require audible indications for adjustment or checking purposes.

5. RECEIVER METERING PROCEDURES

Most Motorola FM communications receivers incorporate either an 11-pin metering plug or a phone-jack mounted on the receiver chassis. Receivers which do not have the meter plug or phone-jack have no special facilities for metering purposes. When measuring the latter type of receivers refer to the alignment chart supplied with the receiver.

NOTE

The 20-pin metering cable plug acts as the internal battery ON-OFF switch. Pins 19 and 20 on the plug are jumpered. Connecting the plug to the test set socket completes the battery circuit. To conserve battery life when not using the test set either (1) disconnect meter cable from test set, or (2) set the Oscillator and Meter Reversing Switch to OFF and put Position Selector Switch to any position except 11 or 13.

a. Receivers Incorporating an 11-pin Metering Plug

The Metering Chart, EPD-7603, included in this instruction manual, lists all of the stages which can be measured in a receiver incorporating an 11-pin metering socket. As an example, with the Position Selector Switch in position 1, the procedure is as follows:

(1) Last IF Stage Alignment

The circuit to be metered is the grid of the last i-f stage. When the metering cable is plugged into the socket on the front panel, the meter is connected across pins #1 and #11 on the 20-pin plug and pins #1 and #11 on the 11-pin plug of the metering cable. At the same time a resistance of 18,000 ohms, in the test set, is placed in series with the meter. The scale to read is the 0-50 ua scale.

The crystal oscillator is used to align receiver i-f sections ranging from 350 kc to 13 mc. The crystal employed must have the same frequency or sub-harmonic of the i-f section being aligned. The frequency of the crystal must be calculated from the formulas given in Table 1. Internal sockets are available to plug-in the AQL, ANL, and/or AUL type crystals, within the frequency range specified above.

A 455 kc crystal is supplied with the equipment. Other crystals must be ordered separately. Table 2 lists the frequency ranges of different types of available crystals. Having calculated the crystal frequency needed, the crystal type number may be selected from this table. When ordering, specify both the crystal frequency and crystal type number. Refer to the receiver block diagram supplied with the receiver for the i-f frequencies required for alignment.

TABLE 1

Crystal Calculations for the Portable Test Set (Crystal calculation information for the peaking generator and deviation meter is contained in their respective sections.)

Fc = Desired test set output frequency

Fx = Crystal frequency required

F_c	F_x
290-800 kc	$F_x = F_c$
800-1600 kc	$F_x = \frac{F_c}{2}$
1600-2000 kc	$F_x = \frac{F_c}{3}$
2-13 mc	$F_x = F_c$

TABLE 2

Crystal Types Available and Their Frequency Range

<u>Crystal Frequency</u>	<u>Motorola Type</u>
290-800 kc	AQL
1250-1600 kc	ANL and AN
2000-6000 kc	ANL and AN
6000-10000 kc	AUL
10000-13000 kc	ANL and AN

To align the i-f section of a receiver:

(a) Plug the applicable i-f test crystal into the "A" terminals on the crystal socket inside the test set.

(b) Plug the metering cable into the 20-pin socket on the test set.

(c) Plug the other end of the metering cable into the 11-pin plug on the receiver chassis.

(d) Connect one end of the r-f probe extension cable to the r-f connector on the test set. Connect the other end of the r-f probe extension cable to the r-f probe cable. Place the r-f probe under the receiver chassis near the grid of the last mixer tube.

(e) Place the Function Selector Switch in the RCVR position.

(f) Place the Position Selector Switch in position 1.

(g) Align the receiver as described in the instructions supplied with the receiver. Note that the test set Position Selector Switch positions may differ from those in the receiver instructions. Refer to the chart in paragraph 4a. of these instructions for a cross reference between switch positions.

(2) 450-470 mc and 890-960 mc Receivers - Multiplier Grid Current Measurements

(a) Connect the metering plug to the test set and to the receiver.

(b) Place the Function Selector Switch in the RCVR position.

(c) Place the Position Selector Switch in position #7 or #8.

(d) Hold the Multiplier switch in the MULT position.

Complete, detailed alignment procedures are described in the instructions supplied with the receivers.

NOTE

In some early models of the 450-470 mc receivers, the first oscillator multiplier is wired to pin #7 and the second oscillator multiplier is wired to pin #8 of the 11-pin metering socket on the receiver chassis. In later models of the 450-470 mc and the 890-960 mc receivers, the first multiplier is wired to pin #6 and the second multiplier is wired to pin #7 of the 11-pin metering socket on the receiver chassis. In the latter case, the MULT switch is used only to measure the second multiplier.

CAUTION

DO NOT use the MULT position when testing receivers which do not have oscillator multipliers, e. g., 25-54 mc, 72-76 mc and 132-174 mc receivers. The 50 ua meter movement can tolerate a 10 times overload which results in 0.5 ma and approximately one volt across the meter. However, with silicon diodes shunting the meter movement, the current required to maintain one volt across the circuit must exceed 10 ma. In the most sensitive meter connection, approximately 200 volts will cause 10 ma to flow in the circuit. The power dissipated by the resistor is approximately

two watts. Since the resistor is rated at 1/2 watt, the duration of this type of overload should be limited, to prevent damage to the precision resistor.

b. Receivers Incorporating a Phone-Jack Metering Connector

To measure receivers which have a phone-jack metering connector, the accessory cable (with a phone-plug at each end) must be used. When the phone-plug is connected to the test set METER receptacle, the Function Selector Switch, Position Selector Switch, XMTR ON button, MICROPHONE connector and the Multiplier Switch are removed from the circuitry. The only exception is the zero center, since it is a separate circuit as described in paragraph 7b.

With the phone-plug connected, the 0-50 ua meter movement is the only scale which can be used. The polarity of the meter may be changed by the METER REV switch.

(1) Plug the red phone-plug, on the accessory cable, into the METER socket on the test set.

(2) Plug the black phone-plug on the other end of the accessory cable into the phone-jack meter connector on the receiver to be tested.

(3) Refer to the instructions supplied with the receiver for detailed metering procedures.

6. TRANSMITTER METERING PROCEDURES

Most Motorola FM communications transmitters incorporate either an 11-pin metering plug or a phone-jack mounted on the transmitter chassis. Transmitters which do not have the metering plug or phone-jack have no special facilities for metering purposes. When measuring the latter type of transmitters, refer to the transmitter alignment chart supplied with the transmitter.

a. Transmitters Incorporating an 11-pin Metering Plug

The Metering Chart, EPD-7603, included with this instruction manual, lists all of the stages which can be measured in a transmitter incorporating an 11-pin metering socket. As an example, with the Position Selector Switch in position 2, the procedure is as follows:

The circuit to be metered is the oscillator or tripler in all Motorola transmitters except 25-54 mc and some 132-174 mc transmitters. When the metering cable is plugged into the socket on the front panel; the meter is connected across pins #2 and #11 on the 20-pin plug and pins #2 and #11 on the 11-pin plug of the metering cable. At the same time a resistance of 18,000 ohms, in the test set, is placed in series with the meter. The scale to read is the 0-50 ua scale.

(1) Measurement of Power Amplifier (PA) Plate Current

Measure the PA current as follows:

- (a) Connect the metering plug to the test set and to the transmitter.
- (b) Place the Function Selector Switch in the XMTR position.
- (c) Place the Position Selector Switch in position #7, PA.
- (d) Push the XMTR ON switch and hold it down during the testing period.

The scale to read is the 0-50 ua scale. Refer to the instructions supplied with the transmitter to interpolate the microampere reading to milliamperes plate current.

NOTE

For PA readings, the transmitter must be keyed by the XMTR ON button. A PA reading cannot be obtained by keying the transmitter with a microphone push-to-talk switch.

b. Transmitters Incorporating a Phone-Jack Metering Connector

To measure transmitters which have a phone-jack metering connector, the accessory cable (with a phone-plug at each end) must be used. When the phone-plug is connected to the test set METER receptacle, the Function Selector Switch, Position Selector Switch, XMTR ON button, MICROPHONE connector and the Multiplier Switch are removed from the circuitry. The only exception is the zero center, since it is a separate circuit as described in paragraph 7b.

With the phone-plug connected, the 0-50 ua meter movement is the only scale which can be used. The polarity of the meter may be changed by the METER REV switch.

(1) Plug the red phone-plug, on the accessory cable, into the METER socket on the test set.

(2) Plug the black phone-plug on the other end of the accessory cable into the phone-jack meter connector on the transmitter to be tested.

(3) Refer to the instructions supplied with the transmitter for detailed metering procedures.

c. Measurement of Transmitter RF Power Output

The P-7208 and P-7208A RF Dummy Loads are available on separate purchase order for use with the test set to measure transmitter r-f power output. The P-7208 has a standing wave ratio of less than 1.2 between 25 mc and 174 mc with a 50 ohm load impedance. The power capabilities of both dummy loads is 25 watts for continuous operation and 60 watts for intermittent operation. The P-7208A is used with Motorola "Handie-Talkie"® FM Radiophone and Pack Sets. It has the same rated capacity as the P-7208 and is calibrated for a full scale reading of 50 ua with 2 watts r-f power.

Measure the r-f power output as follows:

(1) Plug the red phone-plug, on the accessory cable, into the METER socket on the test set.

(2) Plug the black phone-plug, on the accessory cable, into the dummy load.

(3) Connect the transmitter ANT connector to the coaxial connector on the dummy load. Use the r-f extension cable supplied with the test set.

(4) Turn on the transmitter by means of the microphone used with the radio set.

(5) Note the reading on the meter. Refer to the calibration curve supplied with the dummy load to convert the microamperes to watts.

7. MAINTENANCE

a. Service Accessibility

Turn the panel fasteners (one located above the Function Selector Switch and the other is above the Position Selector Switch) one-half turn and pull down for access to the four batteries. Remove the protective cover to expose the circuitry. Refer to the parts/location detail for location of the various components of the circuit.

b. Zero Center Adjustment

The zero center scale (top scale) is adjusted at the factory for an exact zero meter reading. Due to aging and battery life, it may be necessary to readjust the zero center. This control is located on the left inside of the test set through a hole in the protective cover. Refer to the parts location detail. Adjust the control as follows:

(1) Place the Function Selector Switch in the RCVR position.

(2) Place the Position Selector Switch in position 4.

(3) Turn the control in the direction which moves the needle toward zero center. When the needle reaches the zero point, the adjustment is completed.

If the adjustment control does not bring the meter to zero center, replace the 1-1/2 volt battery in the zero center circuit.

c. AC Voltmeter Calibration

The voltmeter is calibrated at the factory. If any components in the meter circuitry are replaced, it may be necessary to recalibrate the meter. The meter calibration control is located on the printed circuit board. Refer to the parts location detail for location of the control.


(1) Plug the 20-pin metering plug into the test set, to jumper pin #19 and #20.

(2) Place the Function Selector Switch in the XMTR position.

(3) Connect an a-c power source to pins #1 and #2 of the MICROPHONE receptacle on the front panel.

(4) Adjust the power source for 2 volts output measured with a voltmeter of known accuracy.

(5) Adjust the meter calibration control until the meter (bottom scale) indicates 2 volts full scale.

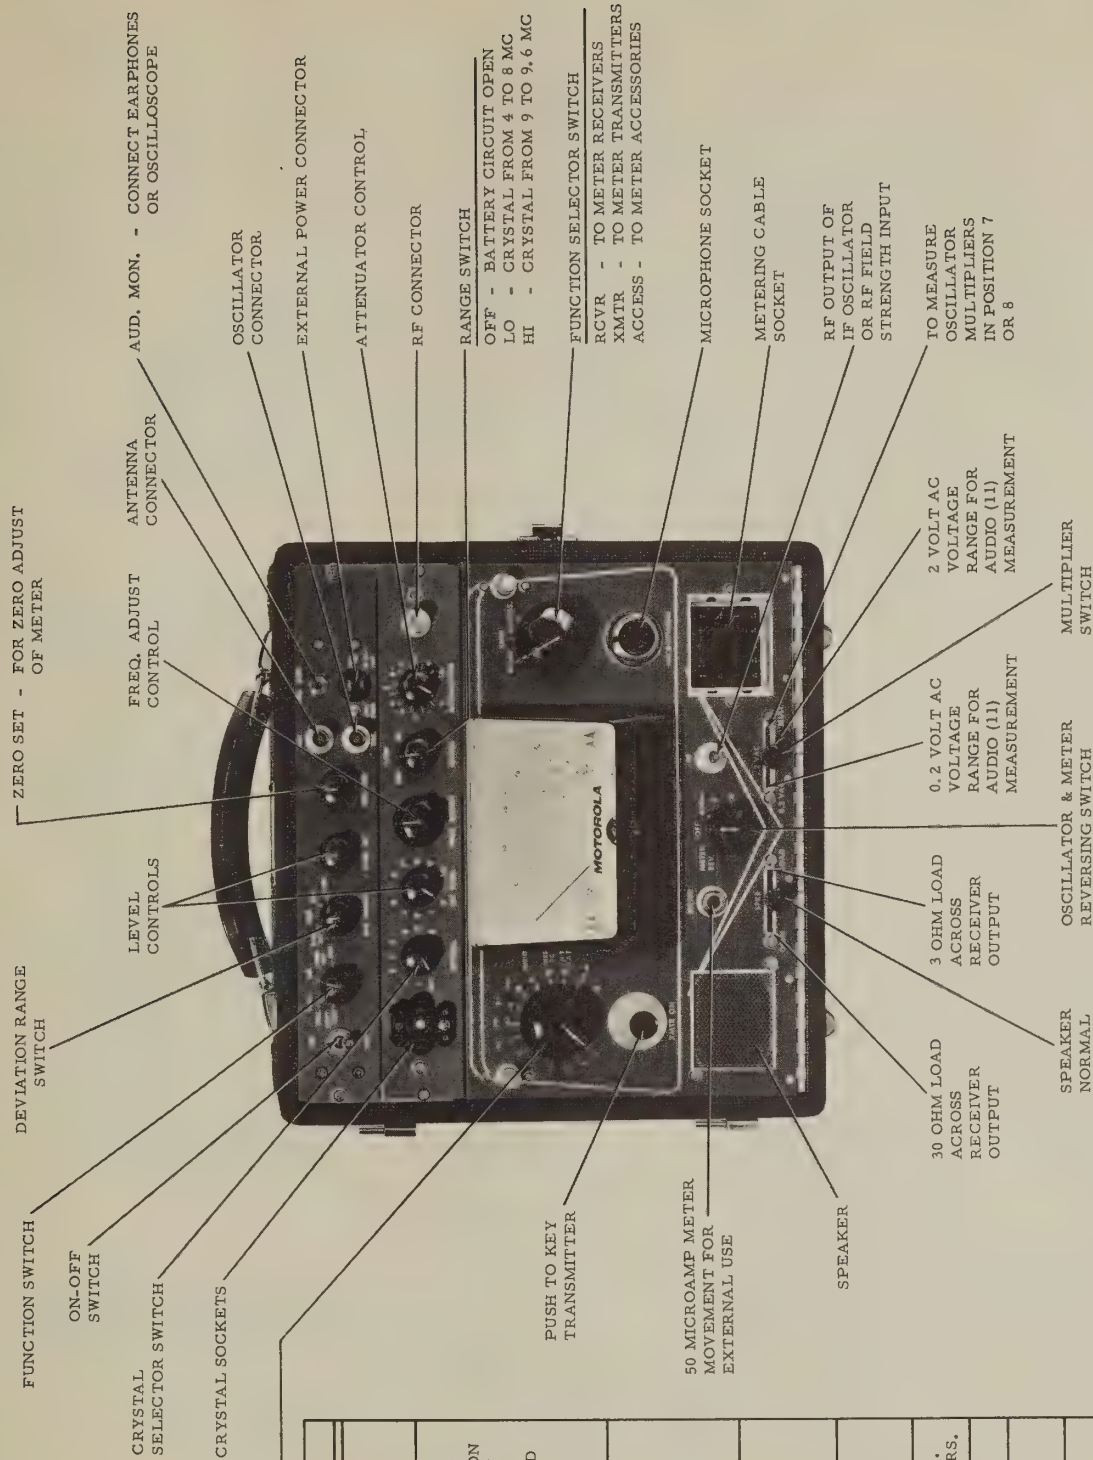

POSITION	CIRCUIT MEASURED
1-6	REFER TO APPLICABLE INSTRUCTION MANUAL FOR STAGES BEING MEASURED.
7	POWER AMPLIFIER PLATE CURRENT IN TRANSMITTERS. (SEE APPLICABLE INSTRUCTION MANUAL FOR INTERPOLATION TO MILLIAMPERES) OSCILLATOR MULTIPLIER GRID IN 450-470 MC & 890-960 MC RECEIVERS. (SEE TEXT)
8	RELATIVE POWER OUTPUT OF 450-470 MC & 890-960 MC TRANSMITTERS. ALSO OSCILLATOR MULTIPLIER IN SOME 450-470 MC RECEIVERS. (SEE TEXT)
9	B+ IN TRANSMITTERS AND RECEIVERS WHEN SUCH VOLTAGE IS WIRED TO METERING SOCKET
10	A+ IN DC RECEIVERS RELAY VOLTAGE IN AC TRANSMITTERS.
11	AUDIO OUTPUT OF RECEIVERS. AUDIO INPUT OF TRANSMITTERS.
12	MIC DC IN TRANSMITTERS
13	6 VOLT BATTERY INSIDE TEST SET
14	RELATIVE RF OUTPUT OF I.F. OSCILLATOR OR RF FIELD STRENGTH INPUT

BEPD-7580-O (MC7645)

METERING CHART

S1056A, S1057A, S1058A AND S1059A PORTABLE TEST SET

(TO BE USED WITH THE ALIGNMENT PROCEDURES DESCRIBED IN THE INSTRUCTIONS SUPPLIED WITH EACH RECEIVER AND TRANSMITTER)

FUNCTION SELECTOR SWITCH RCVR. POSITION (SEE NOTE 3)		FUNCTION SELECTOR SWITCH XMTR. POSITION (SEE NOTE 4)		FUNCTION SELECTOR SWITCH ACCESS. POSITION
POSITION OF POSITION SELECTOR SWITCH	CIRCUIT METERED IN MOTOROLA RECEIVERS	METER SCALE	CIRCUIT MEASURED IN MOTOROLA TRANSMITTERS	USE METER SCALE
IN THIS POSITION THE TEST SET METER IS SWITCHED TO PROVIDE METERING FOR THE PEAKING GENERATOR ACCESSORY				
1	See Alignment Chart	0-50 ua	Same as Position 8	0-50 ua
2	See Alignment Chart	0-50 ua	Osc. or Tripler Except in 25-54 Mc and Some 144-174 Mc	0-50 ua
3	See Alignment Chart	0-50 ua	Doubler Except Not Used in some 25-54 Mc Xmtrs.	0-50 ua
4	Discriminator Output	20-0-20 ua	Doubler or Tripler	0-50 ua
5	Discriminator Input	0-50 ua	Doubler or Tripler	0-50 ua
6	See Alignment Chart	0-50 ua	Grid of Power Amplifier	0-50 ua
7	Multipliers in 450-470 Mc and 890-960 Mc Rcvrs. with Multiplier Switch in Mult. Position	0-50 ua	Power Amplifier } See Plate Current } Note 2	See Alignment Chart
8		0-50 ua	Relative Power Output of 450-470 Mc & 890-960 Mc Units	Relative 0-50 ua
9	B+ (when wired)	0-1000 V	B+ to Power Amplifier Stages	0-1000 V
10	Filament Voltage when wired (DC Only)	0-15 VDC	Push-to-Talk Voltage with Xmtr. Unkeyed	0-15 VDC
11	Audio Output of Receiver	See Note 1 0-2 VAC 0-2 VAC	Audio Input To Transmitter	See Note 1 0-2 VAC 0-2 VAC
12	NONE		Microphone DC Voltage	0-30 VDC
13	Test Set Battery Check	0-15 V	Test Set Battery Check	0-15 VDC
14	RF Output of IF Oscillator or Field Strength	Relative 0-50	RF Output of IF Oscillator or Field Strength	Relative 0-50
15	Deviation Meter	0-16 Kc 0-8 Kc 0-1.6 Kc	Deviation Meter	0-16 Kc 0-8 Kc 0-1.6 Kc

NOTES:

1. The **MULT** switch changes the range from 2 VAC full scale to .2 VAC full scale. $\pm 10\%$ -5°C to $+60^{\circ}\text{C}$ (-30% at -30°C).
2. To obtain PA current reading, the transmitter must be keyed by the **XMTR ON** switch. The Microphone push-to-talk switch can be used for all other transmitter metering.
3. When measuring receivers, the function selector switch must be in the **RCVR** position and the metering cable connected to the test set and receiver.
4. When measuring transmitters, the function selection switch must be in the **XMTR** position and the metering cable connected to the test set and transmitter.
5. The deviation meter is not wired through the metering cable. It must be turned on and off with the switch on its own front panel.

MOTOROLA PT. NO. EPD-7603

TYPE BNC CONNECTOR ASSEMBLY INSTRUCTIONS



NUT



 
WASHER




GASKET



CLAMP



FEMALE CONTACTS

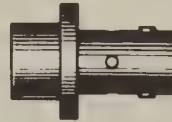


JACK BODY



MALE CONTACTS



 PLUG BODY




Trim jacket $\frac{1}{4}$ " for RG-58/U, $\frac{5}{16}$ " for RG-59/U or $\frac{7}{16}$ " for RG-71/U.



Fray shield and strip inner dielectric $\frac{1}{8}$ ". Tin center conductor.




Taper braid and slide nut, washer, gasket and clamp over braid. Clamp is inserted so that its inner shoulder fits squarely against end of cable jacket.

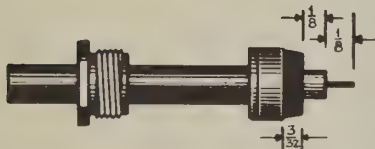


With clamp in place, comb out braid, fold back smooth as shown and trim $\frac{3}{32}$ " from end.




Slip contact in place, butt against dielectric and solder. Remove excess solder from outside of contact. Be sure cable dielectric is not heated excessively and swollen so as to prevent dielectric from entering into connector body.

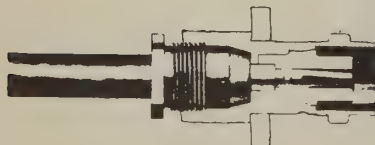


Push assembly into body as far as it will go. Slide nut into body and screw in place with wrench until tight. For this operation, hold cable and shell rigid and rotate nut.

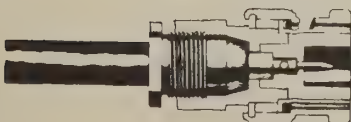

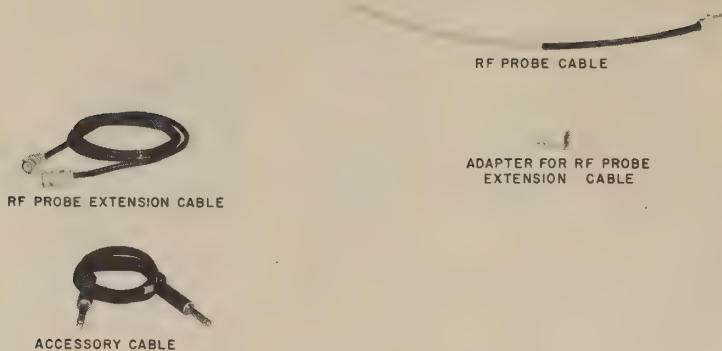


REAR VIEW OF FRONT PANEL

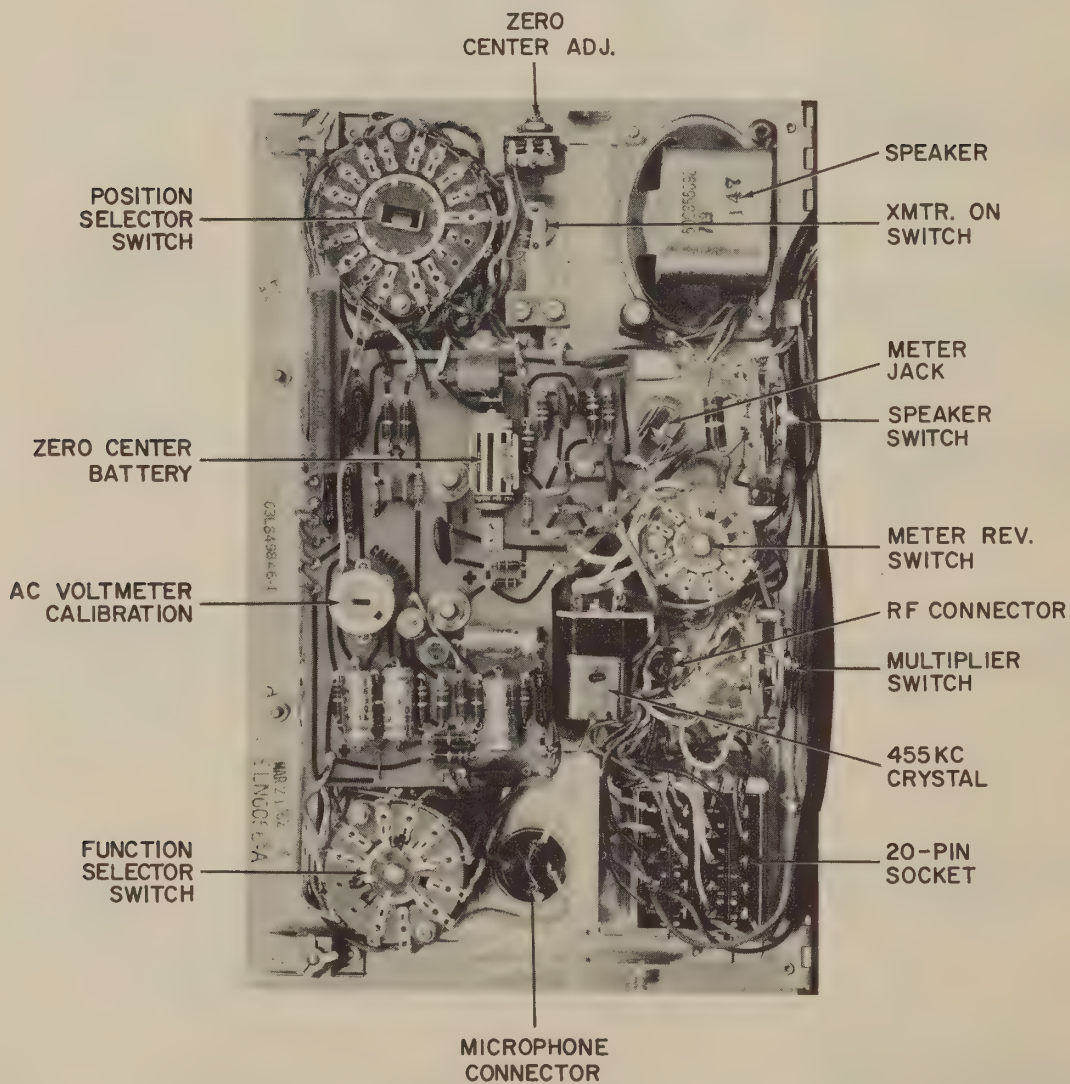

EEPD-7733-O

EEPD-7732-O

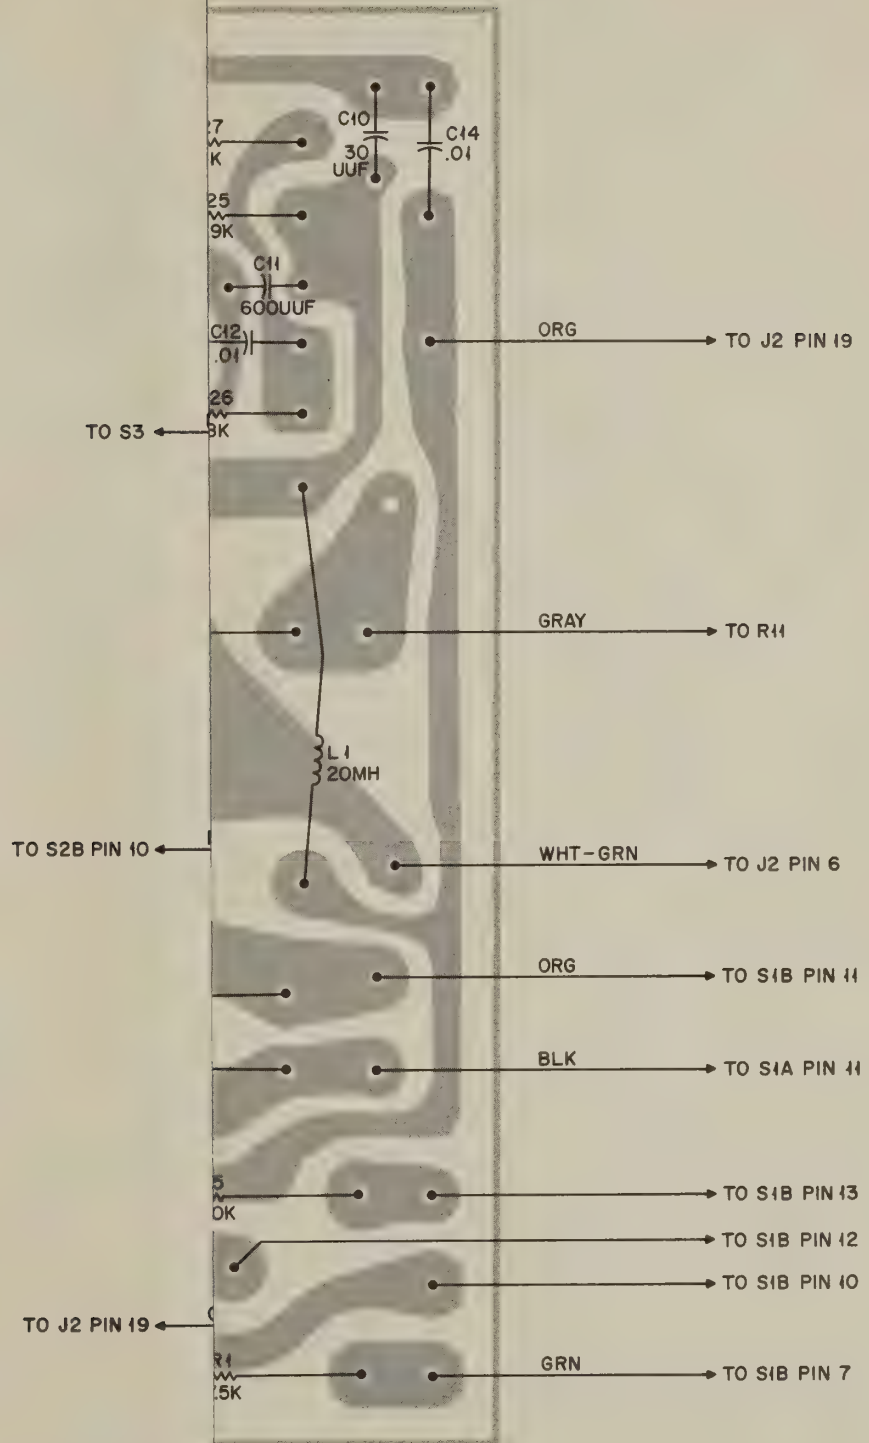




RF PROBE EXTENSION CABLE


RF PROBE CABLE


ADAPTER FOR RF PROBE
EXTENSION CABLE

ACCESSORY CABLE

REAR VIEW OF FRONT PANEL

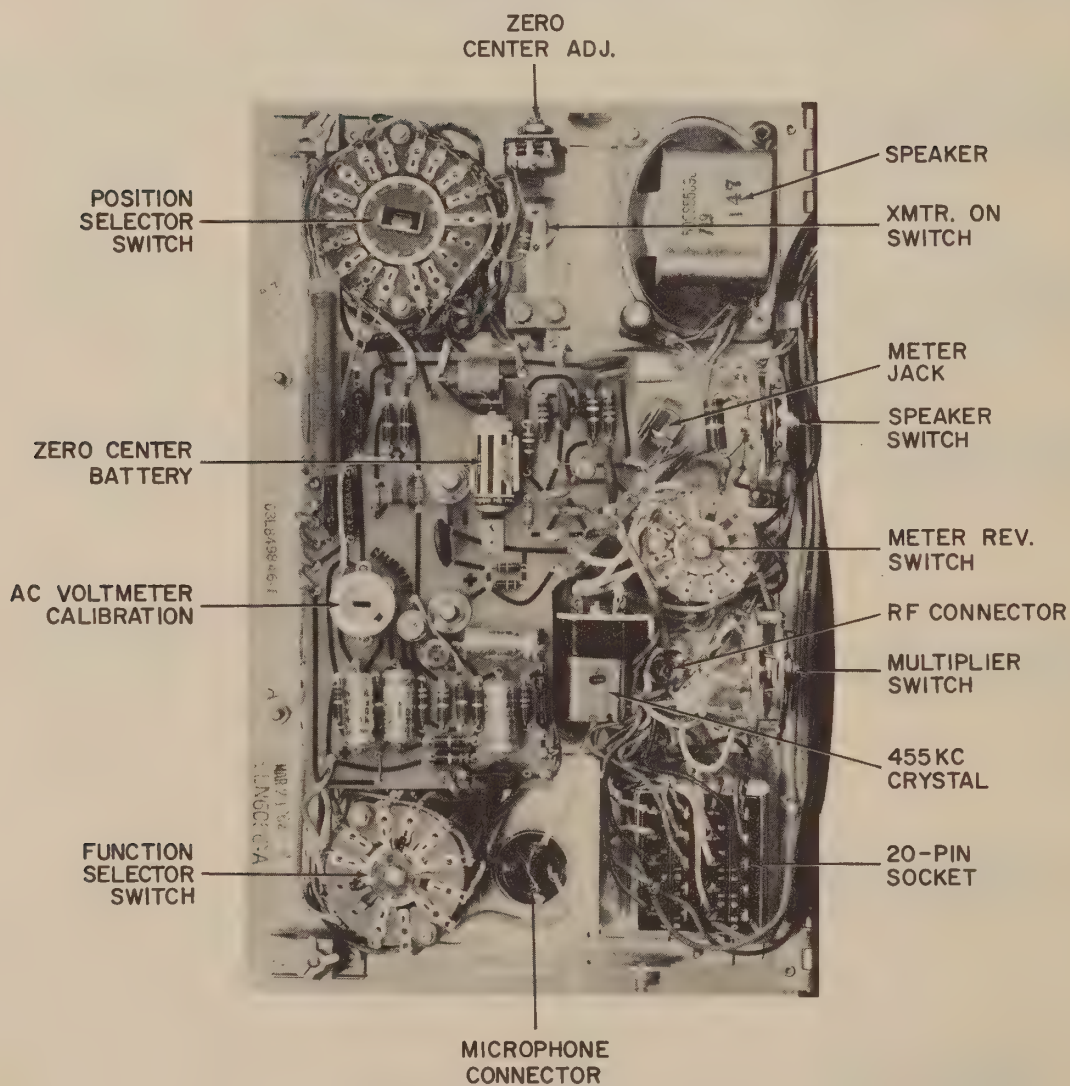

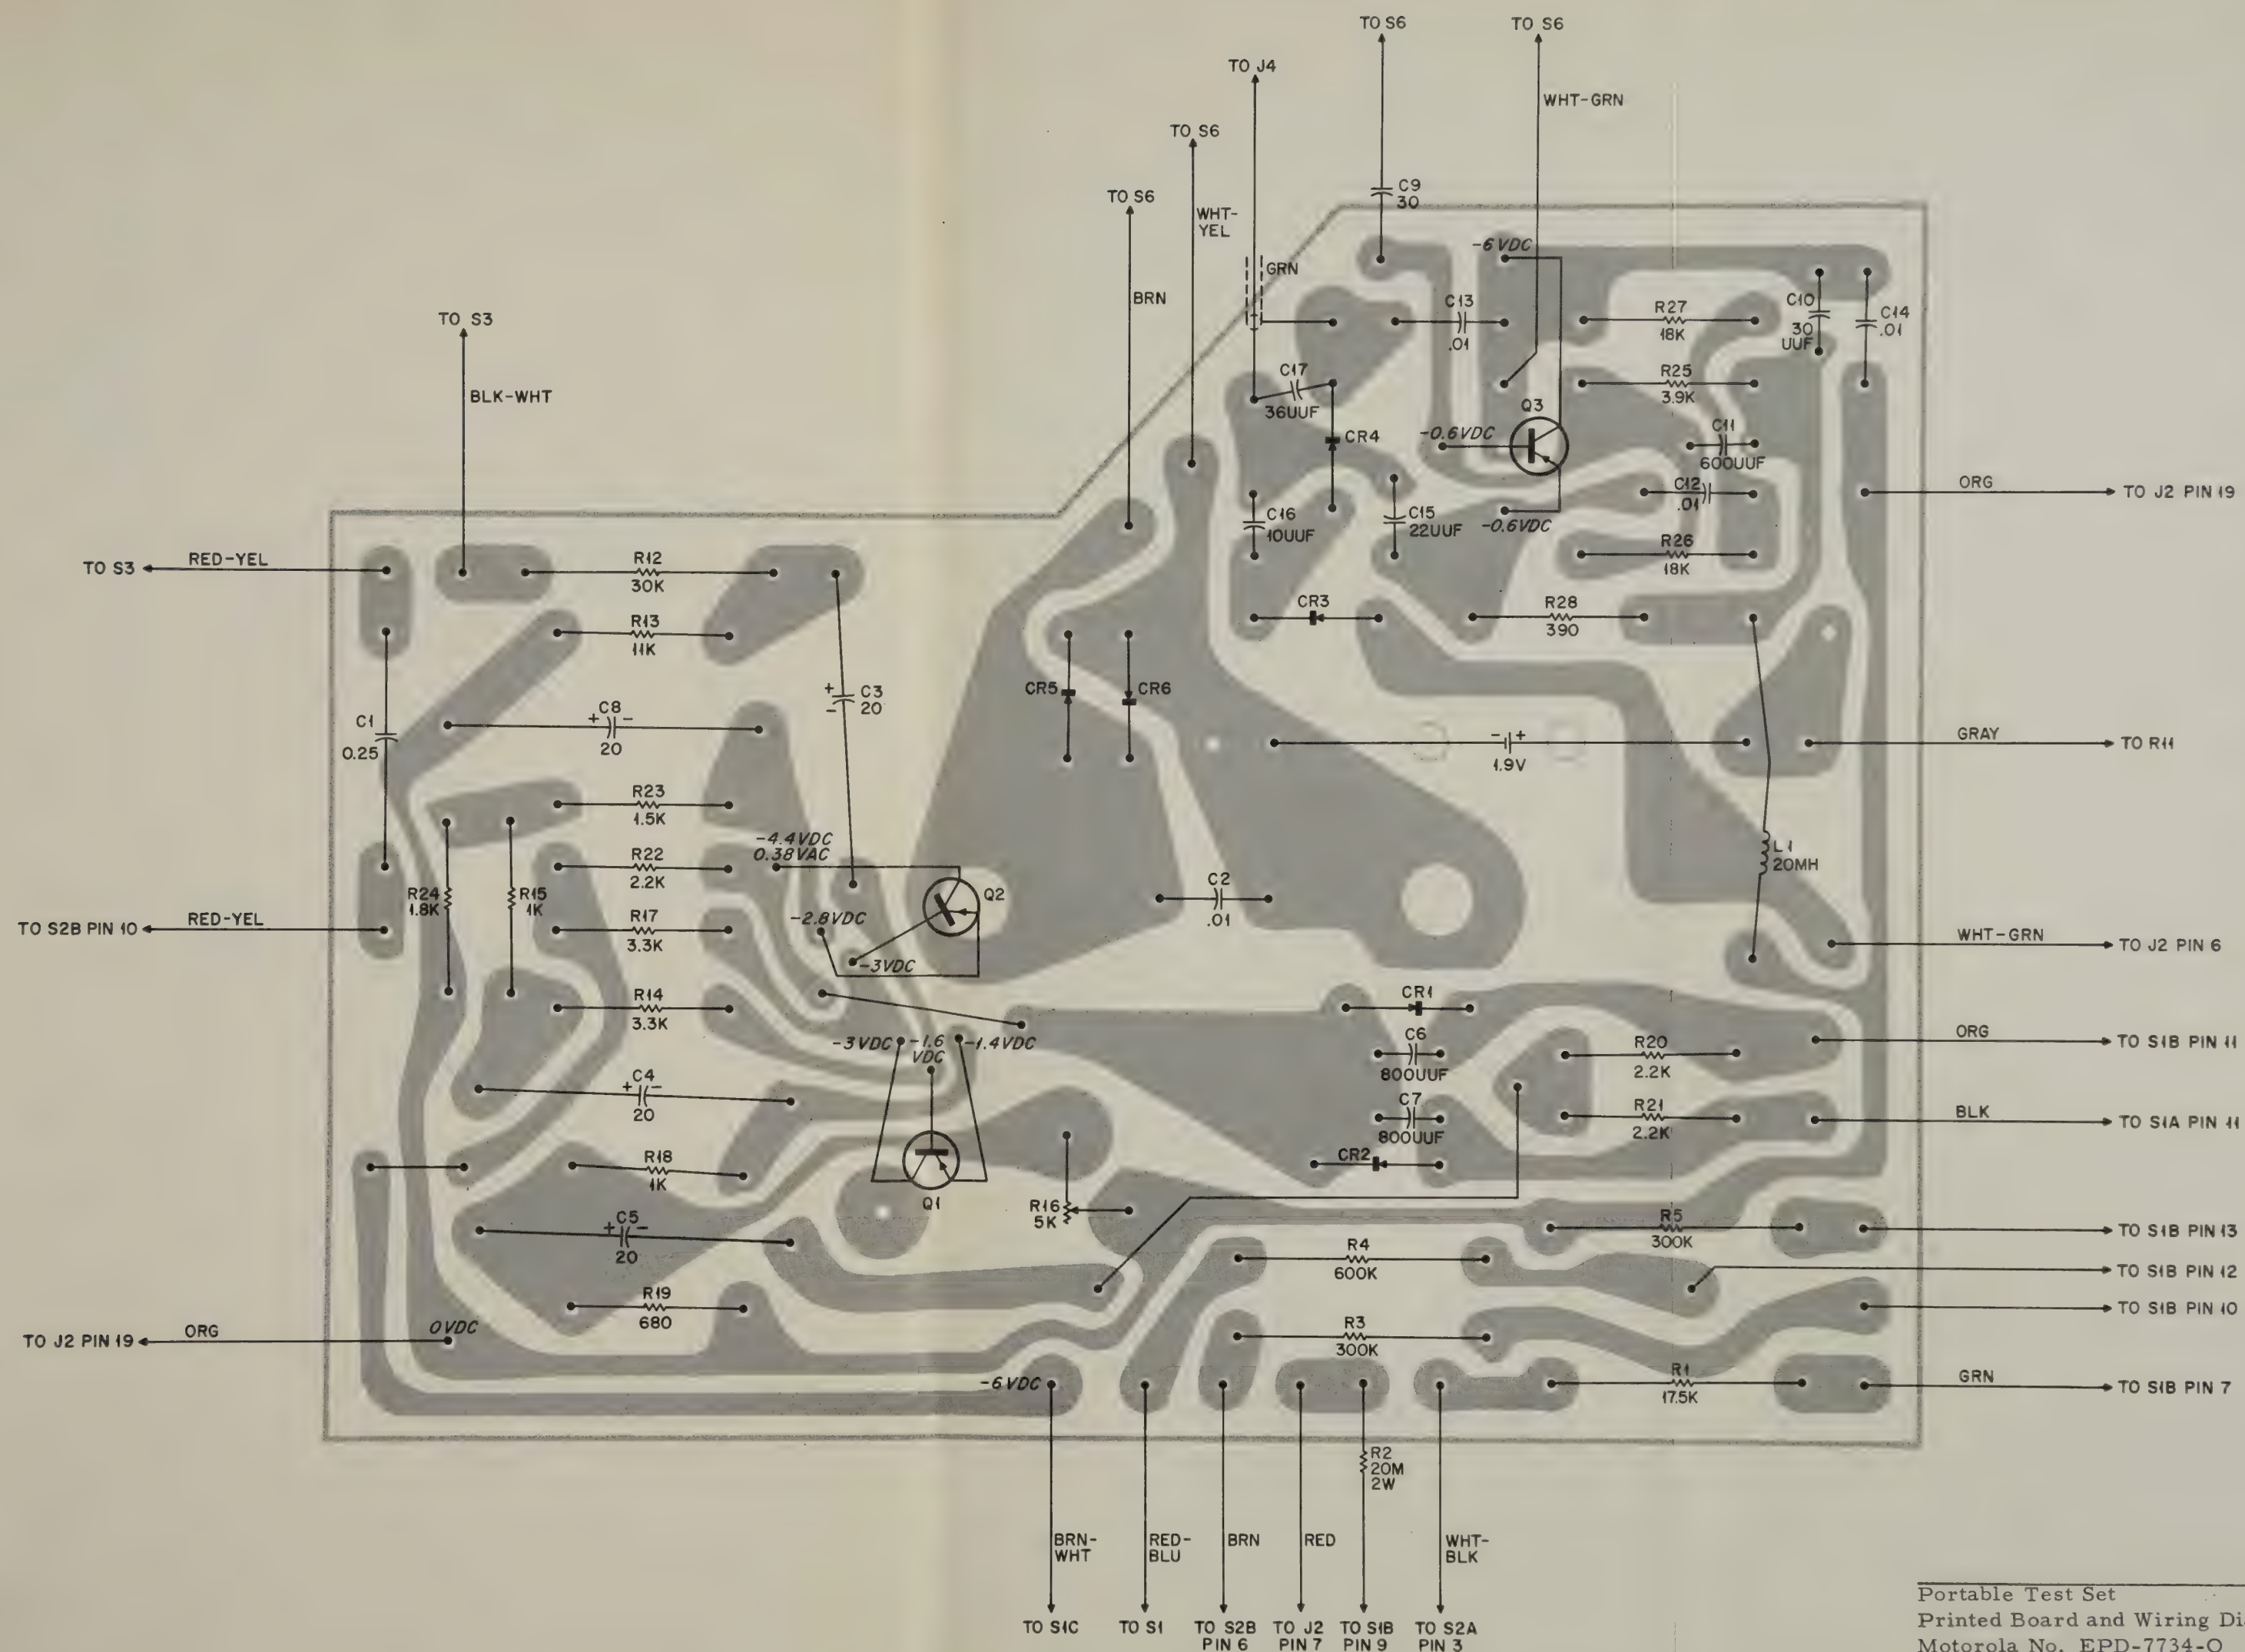


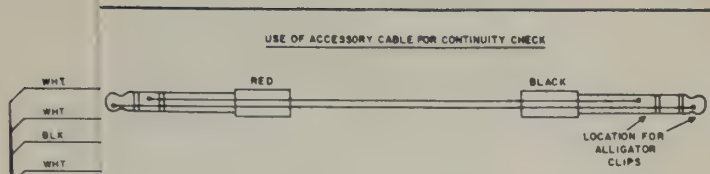

NOTES

- 1 ALL SWITCHES SHOWN IN MAXIMUM CCW POSITION EXCEPT METER MULT SWITCH AND SPEAKER SWITCH WHICH ARE SHOWN IN CENTER POSITION
- 2 RF OSCILLATOR VOLTAGES TAKEN WITH OSCILLATOR OPERATING
- 3 VOLTAGE MEASUREMENTS OF AUDIO VOLTMETER TAKEN WITH FUNCTION SELECTOR SWITCH IN XMTR POSITION, +1 BVAC APPLIED TO PIN 1 OF MIC RECEPTACLE AND POSITION SELECTOR SWITCH IN POSITION II
- 4 ALL RESISTORS 1/2 WATT 510% UNLESS OTHERWISE NOTED
- 5 NUMBERING ON FUNCTION SELECTOR SWITCH IS FOR REFERENCE PURPOSES ONLY

TRANSISTOR DETAIL

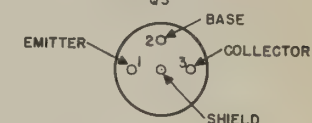

MODEL TABLE

MODEL	SUFFIX	DESCRIPTION
SLN6056A		PORTABLE TEST SET KIT
SLN6082A		BATTERY KIT

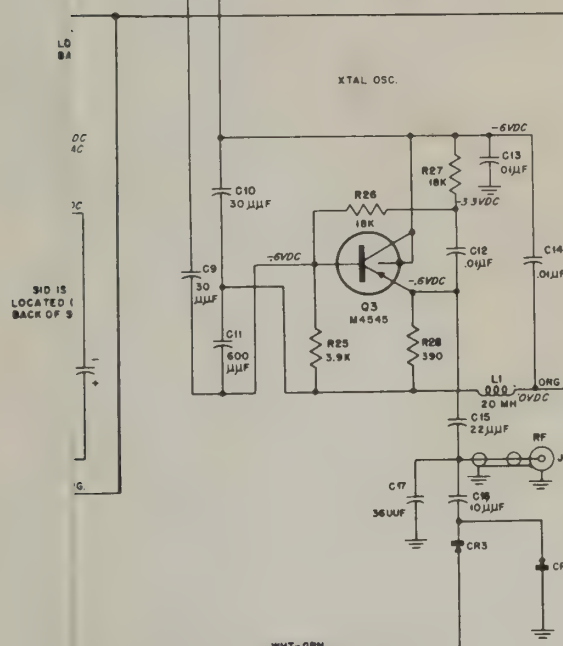



DIAGRAM NO. 63E81011A03

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10
- 11 A.F. from Rx, To Tx

PREVIOUS REVISIONS LISTED
ON BACK OF THIS DIAGRAM

Portable Test Set
Schematic Diagram
Motorola No. 63E81011A03-O2
12/18/62-UM



USE OF ACCESSORY CABLE FOR CONTINUITY CHECK

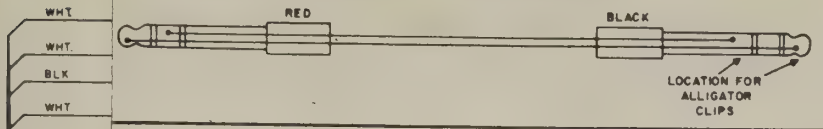

NOTES:

- 1 ALL SWITCHES SHOWN IN MAXIMUM CCW POSITION EXCEPT METER MULT SWITCH AND SPEAKER SWITCH WHICH ARE SHOWN IN CENTER POSITION
- 2 RF OSCILLATOR VOLTAGES TAKEN WITH OSCILLATOR OPERATING
- 3 VOLTAGE MEASUREMENTS OF AUDIO VOLT-METER TAKEN WITH FUNCTION SELECTOR SWITCH IN XMTR POSITION, +1.8VAC APPLIED TO PIN 1 OF MIC. RECEPTACLE AND POSITION SELECTOR SWITCH IN POSITION II.
- 4 ALL RESISTORS 1/2 WATT $\pm 10\%$ UNLESS OTHERWISE NOTED.
- 5 NUMBERING ON FUNCTION SELECTOR SWITCH IS FOR REFERENCE PURPOSES ONLY.

TRANSISTOR DETAIL Q3

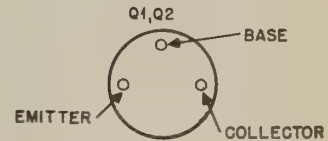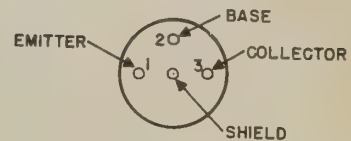

MODEL TABLE

MODEL	SUFFIX	DESCRIPTION
SLN6056A		PORTABLE TEST SET KIT
SLN6082A		BATTERY KIT

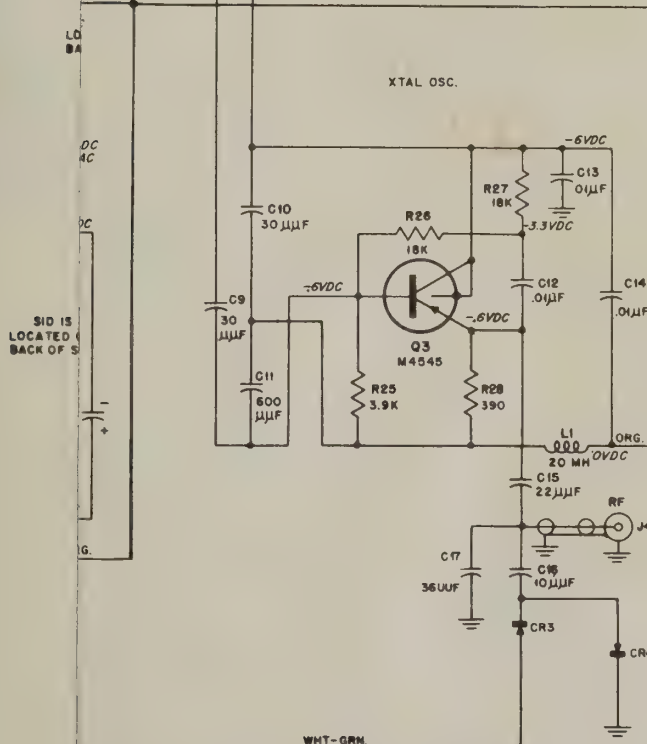


DIAGRAM NO. 63E81011A03

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10
- 11 A.P. from 10, To Tx

PREVIOUS REVISIONS LISTED
ON BACK OF THIS DIAGRAM →

Portable Test Set
Schematic Diagram
Motorola No. 63E81011A03-O2
12/18/62-UM

REVISIONS				
DIAG. ISSUE	CHASSIS AND SUFFIX NO.	REF. SYMBOL	CHANGE	LOCATION
O1	SLN6056A	BT1	WAS 60B852116	Q1
		C3	WAS 23C855013	Q1 BASE
		M1	WAS 72D855099	S6 SWITCH
		Q1	WAS 48R134545	VOLTMETER AMPL.
			ADDED NOTE	PARTS LIST
O2	SLN6056A	BT1	REMOVED FROM MODEL SLN6056A TEST SET KIT	PARTS LIST
	SLN6082A	BT1	BATTERY KIT ADDED	

PARTS LIST for Diagram 63E81011A03-O2

SLN6056A Portable Test Set

REFERENCE SYMBOL	MOTOROLA PART No.	DESCRIPTION
BT2	60B855262	<u>BATTERY, dry:</u> 1-1/2 volt; "N" size cell
C1	8K834384	<u>CAPACITOR, fixed:</u> metallized paper; tubular; .25 uf ±20%; 200 vdcw
C2	21B801139	ceramic; disc; .01 uf; +80-20%; 600 vdcw
C3	23C844927 or 23C82601A03	electrolytic; tubular; 20 uf +100-10%; 25 vdcw
C4		same as C3
C5		same as C3
C6	21B847070	ceramic; disc; 800 uuf ±10%; 600 vdcw
C7		same as C6
C8		same as C3
C9	21R114166	ceramic; disc; 30 uuf ±10%; 500 vdcw
C10		same as C9
C11	21K851299	ceramic; disc; 600 uuf ±10%; 600 vdcw
C12		same as C2
C13		same as C2
C14		same as C2
C15	21R124554	ceramic; disc; 22 uuf ±5%; 500 vdcw
C16	21R410063	ceramic; disc; 10 uuf ±5%; 500 vdcw
C17	21K852185	ceramic; disc; 36 uuf ±5%; 500 vdcw
CR1	48C847274	<u>SEMICONDUCTOR DEVICE, diode:</u> (SEE NOTE) germanium
CR2		same as CR1
CR3		same as CR1
CR4		same as CR1
CR5	48B857965	silicon
CR6		same as CR5
J1	9B16345	<u>CONNECTOR, receptacle:</u> female; 4 contact; polarized; round molded phenolic insulator; chassis mounted
J2	28B855267	male; 20 contact; polarized; rectangular molded black phenolic insulator; saddle mounted
J3	9B855279	<u>JACK, telephone:</u> contact arrangement of stacks, 2 form "B"
J4	9B855268	<u>CONNECTOR, receptacle:</u> female; single contact; round molded insulator; 50 ohm impedance; chassis mounted
L1	24B801876	<u>COIL, RF:</u> choke; 20 millihenries; coded BLUE dot
LS1	50C855098	<u>SPEAKER, magnetic:</u> voice coil impedance, 3.2 ohm; power rated at 3 watt; PM type; 2" x 3"
M1	72D82534D01	<u>METER, multi-scale:</u> panel mounted; consists of 20-0-20, 0-50 ua; 0-1000 VDC, 0-15 VDC, 0-30 VDC, 0-2 VAC
P1	9B855266	<u>CONNECTOR, plug:</u> female; 20 contact; polarized; rectangular molded black phenolic insulator; cable mounted

REFERENCE SYMBOL	MOTOROLA PART No.	DESCRIPTION
P2	28B813576	<u>CONNECTOR, plug:</u> male; 11 contact; polarized; round molded black phenolic insulator; does not include 1V858293 SHELL, connector and handle and 41A483715 SPRING, connector shell retainer; shell and spring must be ordered separately
Q1	48A124326	<u>TRANSISTOR:</u> (SEE NOTE) P-N-P
Q2		same as Q1
Q3	48R134545	P-N-P; type M4545
R1	6K855337	<u>RESISTOR, fixed:</u> carbon; unless otherwise stated carbon film; 17.5K ±2%; 1/2 w; ins.
R2	6K892455	carbon film; 20 megohm ±2%; 2 w; ins.
R3	6K855329	carbon film; 300K ±2%; 1/2 w; ins.
R4	6K855330	carbon film; 600K ±2%; 1/2 w; ins.
R5		same as R3
R6	6K855332	carbon film; 360K ±2%; 1/2 w; ins.
R7	17K82839	wire-wound; 3 ohm ±10%; 5 w; ins.
R8	6R5676	27 ohm ±10%; 1 w; ins.
R9		same as R1
R10	6R6048	47K ±10%; 1/2 w; ins.
R11	18K848202	variable; carbon; 25K ±20%; .2 watt
R12	6K855331	carbon film; 30K ±2%; 1/2 w; ins.
R13	6R115017	11K ±5%; 1/2 w; ins.
R14	6R5581	3.3K ±10%; 1/2 w; ins.
R15	6R6229	1K ±10%; 1/2 w; ins.
R16	18C855263	variable; wire-wound; 5K ±20%; 1 w
R17		same as R14
R18		same as R15
R19	6R6040	680 ohm ±10%; 1/2 w; ins.
R20	6R6069	2.2K ±10%; 1/2 w; ins.
R21		same as R20
R22		same as R20
R23	6R6038	1.5K ±10%; 1/2 w; ins.
R24	6R2089	1.8K ±10%; 1/2 w; ins.
R25	6R5659	3.9K ±10%; 1/2 w; ins.
R26	6R5591	18K ±10%; 1/2 w; ins.
R27		same as R26
R28	6R5554	390 ohm ±10%; 1/2 w; ins.
S1	40C855097	<u>SWITCH,</u> rotary; 2 section; continuous; non-shorting
S2	40B855095	rotary; 3 section; 3 position; non-shorting
S3	40B855094	lever; 1 section; 3 position; non-shorting
S4	40B855096	lever; 1 section; 3 position shorting
S5	40C848230	push; contact arrangement; 2 form "A"; non-locking
S6	40B855093	rotary; 2 section; 5 position; non-shorting
W1	1V858292	<u>CABLE ASSEMBLY, special purpose:</u> Metering; includes: 30B474498 CABLE, special purpose; 12 conductor; rubber covered; 50" length required 10M519 WIRE, electrical; single conductor; #24 ga. sol.; 1" required Reference parts P1, P2


REFERENCE SYMBOL	MOTOROLA PART No.	DESCRIPTION
Y1		<u>CRYSTAL UNIT, quartz:</u> not supplied; when ordering refer to TABLE 2, Page 5 for frequency and type
Y2	Type AQL	455 kc
XY1	9K857508	<u>SOCKET, crystal:</u> female; 4 contact; square molded black bakelite base; chassis mounted
XY2	9K857509	female; 2 contact; rectangular molded black bakelite base; chassis mounted
MISCELLANEOUS NON-REFERENCED PARTS LIST		
	13A855076 36A855276 36A855070 36A855071	GRILLE, speaker BUTTON, lever; 2 required; for reference parts S3, S4 KNOB, control; 2 required; for reference parts S1, S2 KNOB, control; for reference part S6
	55A855264 55K855265	FASTNER, adjustable pawl: R.H. FASTNER, adjustable pawl: L.H.
	58B855270 1V855413	ADAPTER: UHF to BNC ACCESSORY CABLE ASSEMBLY: includes: 30A76858 CABLE, special purpose; 2 conductor; rubber covered; 4 ft. length required 28A855277 PLUG, telephone: black handle 28K855278 PLUG, telephone: red handle
	1V855414	RF TEST LEAD ASSEMBLY: includes: 30B475378 CABLE, RF: coaxial; RG-58A/U; 4 ft. length req'd. 28B844876 CONNECTOR, plug: single contact; 2 required
	1V855415	RF PROBE ASSEMBLY: includes: 30B475378 CABLE, RF: coaxial; RG-58A/U; 1 ft. length req'd 9B855269 JACK, telephone
	1V855404 1V855411	METER PANEL ASSY. (Riveted) METER PANEL COVER ASSY. (Riveted)
	1V867350	CASE ASSY: includes 16E855419 CASE, test set 42B861758 HOLDER, battery 7A82479 BRACKET

SLN6082A Battery Kit

BT1	60B864085 or 60K867953	<u>BATTERY, dry:</u> 1-1/2 volt; "D" size cell; 4 req'd
-----	---------------------------	--

NOTE:

Replacement transistors and diodes must be ordered by Motorola part number only for optimum performance.

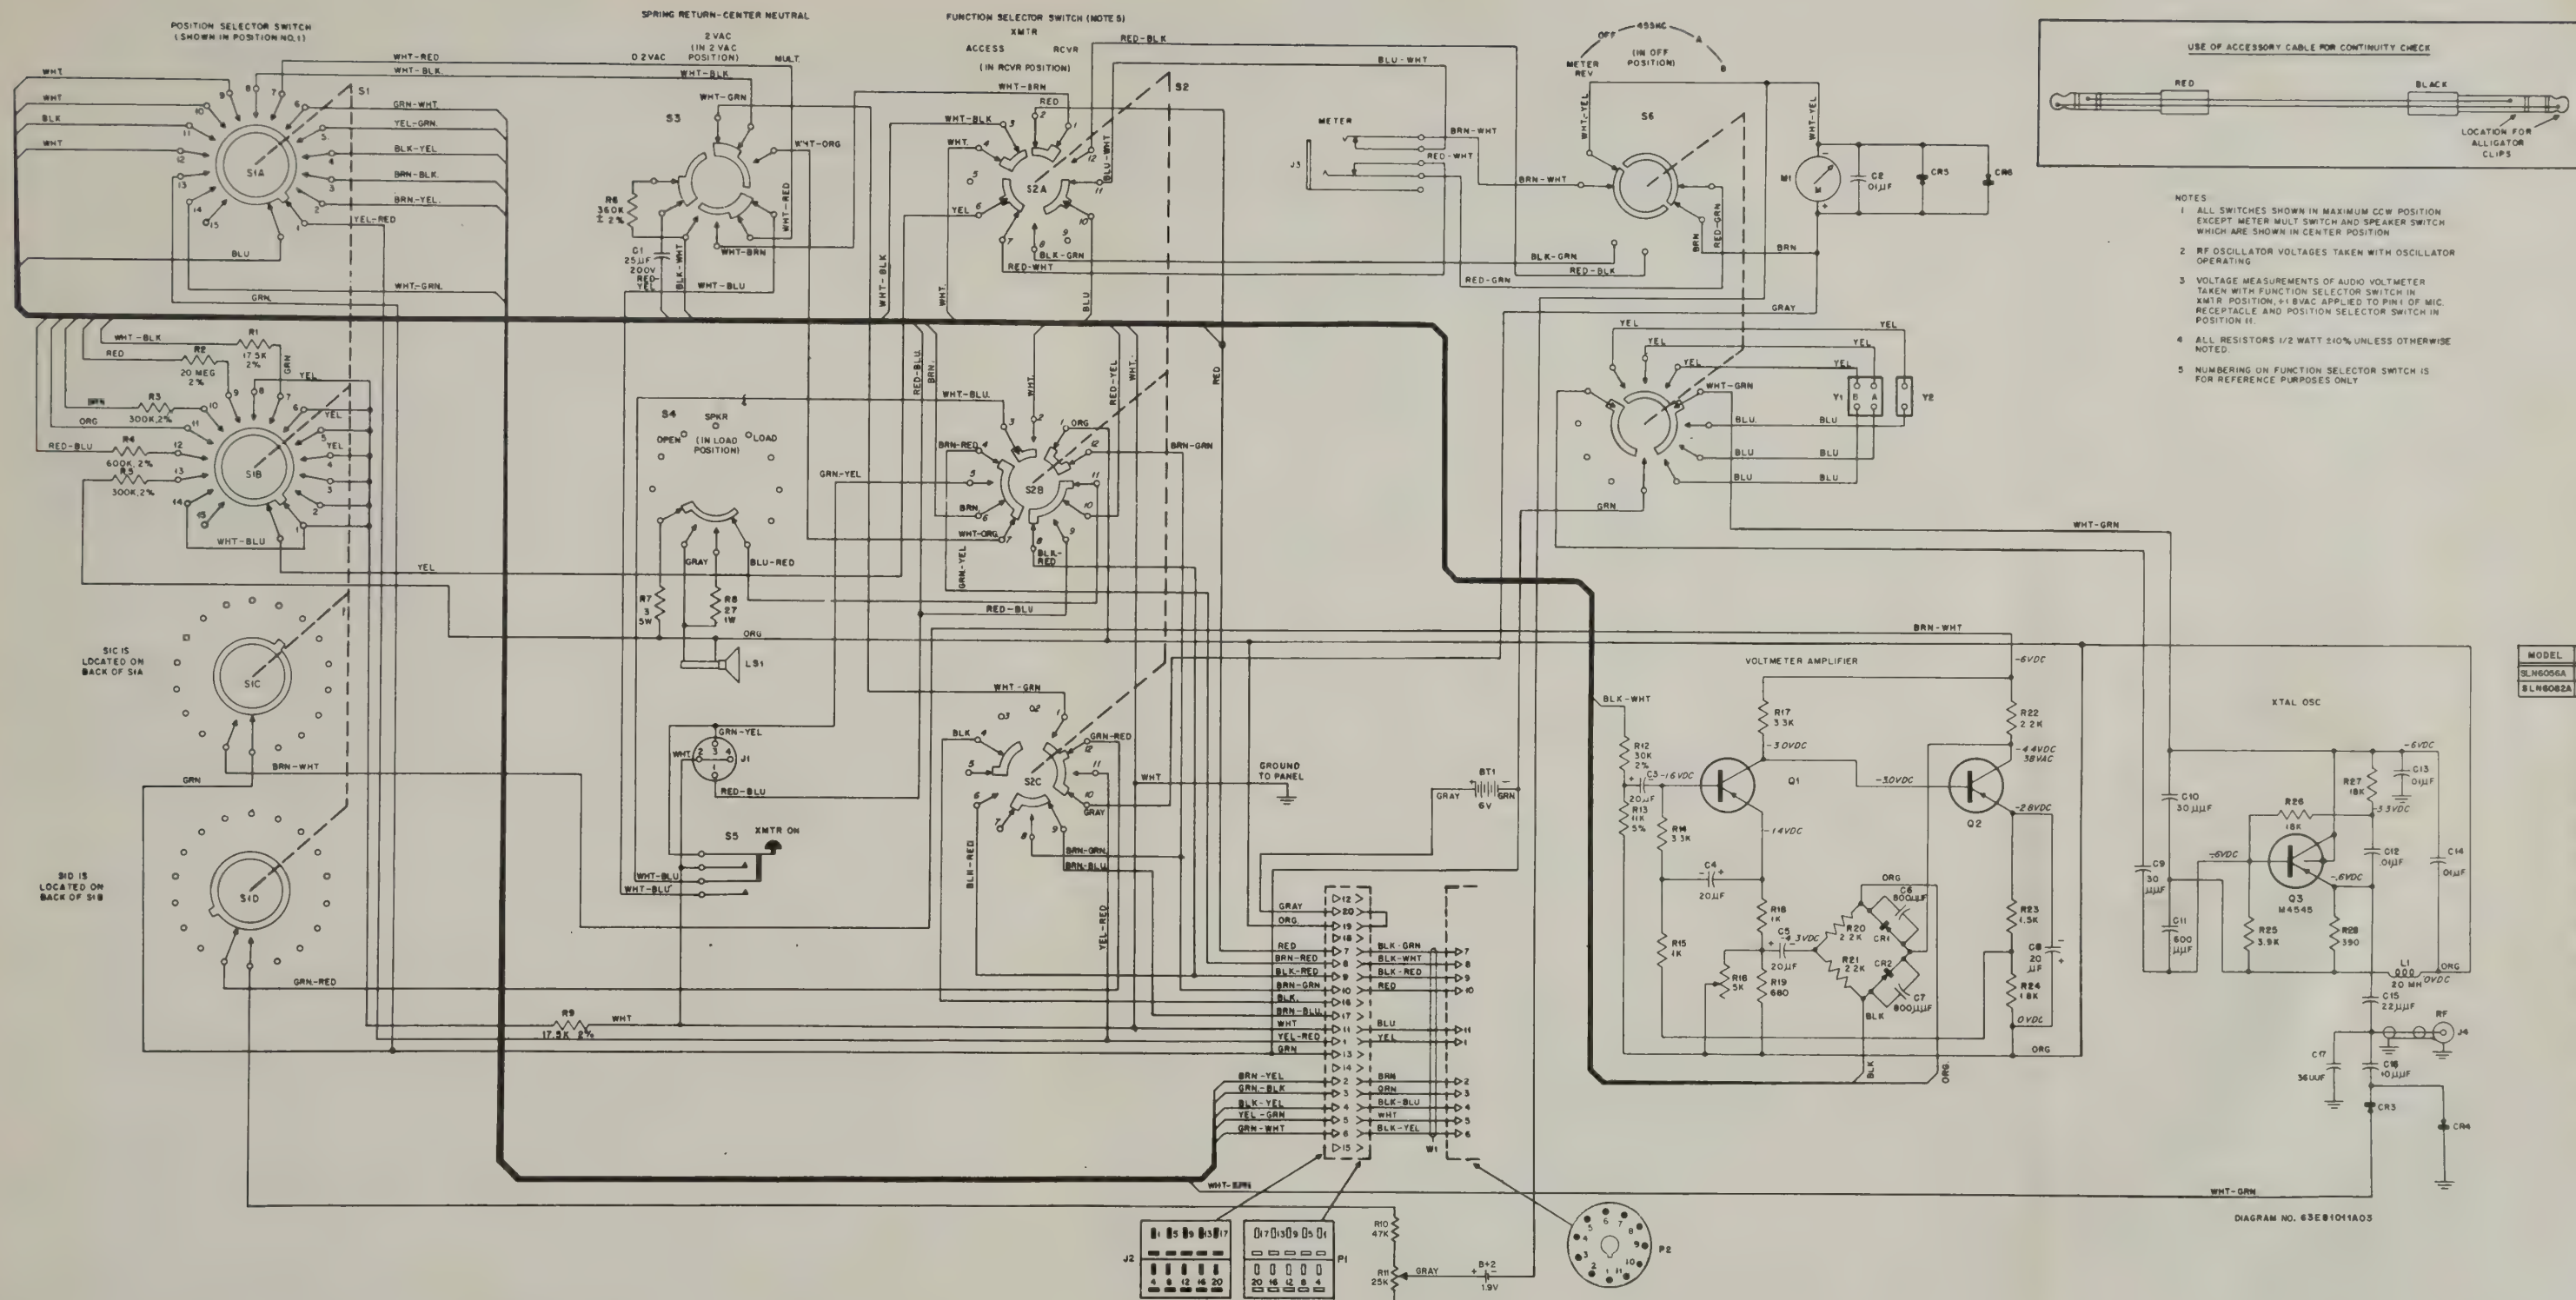

PREVIOUS REVISIONS LISTED
ON BACK OF THIS DIAGRAM →

Portable Test Set
Schematic Diagram
Motorola No. 63E81011A03-O2
12/18/62-UM

DESCRIPTION

STAL UNIT, quartz:
 ot supplied; when ordering
 refer to TABLE 2, Page 5 for
 frequency and type
 55 kc

KET, crystal:
 emale; 4 contact; square molded
 black bakelite base; chassis
 mounted
 emale; 2 contact; rectangular
 molded black bakelite base;
 chassis mounted

REFERENCED PARTS LIST

LLE, speaker
 TON, lever: 2 required; for
 reference parts S3, S4
 DB, control: 2 required; for
 reference parts S1, S2
 DB, control: for reference part S6

TNER, adjustable pawl: R.H.
 TNER, adjustable pawl: L.H.

APTER: UHF to BNC
 ESSORY CABLE ASSEMBLY:
 ncludes:
 0A76858 CABLE, special
 purpose: 2 conductor; rubber
 covered; 4 ft. length required
 8A855277 PLUG, telephone:
 black handle
 8K855278 PLUG, telephone:
 red handle
 TEST LEAD ASSEMBLY:
 ncludes:
 0B475378 CABLE, RF: coaxial;
 RG-58A/U; 4 ft. length req'd.
 8B844876 CONNECTOR, plug:
 single contact; 2 required
 PROBE ASSEMBLY: includes:
 0B475378 CABLE, RF: coaxial;
 RG-58A/U; 1 ft. length req'd
 B855269 JACK, telephone
 TER PANEL ASSY. (Riveted)
 TER PANEL COVER ASSY.
 Riveted)
 SE ASSY: includes
 6E855419 CASE, test set
 2B861758 HOLDER, battery
 7A82479 BRACKET

ATTERY, dry:
 1-1/2 volt; "D" size cell; 4 req'd

and diodes must be ordered by
 ly for optimum performance.

PEAKING GENERATOR

MODEL SLN6057A



volt d-c power source. The transistorized oscillator will operate properly only with anti-resonant crystals

The peaking generator comes already mounted in the S1057A, and the S1059A Portable Test Sets. It may also be purchased as a separate item to be mounted in the TU546, S1056A, or the S1058A Portable Test Sets. When mounted in the test set housing, the generator uses the battery supply built into the test set.

Refer to paragraph 7. INSTALLATION, for installing the SLN6057A Peaking Generator in the TU546, S1056A or S1058A Portable Test Set.

If the test set is used at one location and the generator is required at another location, the generator may be removed from the test set housing. A metal cover, which is part of the generator, protects the generator components when it is removed from the test set housing. To provide operating voltages, the generator can then be connected to any 6 volt d-c battery.

1. DESCRIPTION

The Model SLN6057A Peaking Generator is a crystal-controlled signal source which provides r-f signals ranging from 4 mc to 960 mc. The generator is used for peaking of the r-f stages of FM communications receivers operating within the 4 to 960 mc range. It also provides normally encountered intermediate frequencies for alignment of receiver i-f stages.

The peaking generator essentially consists of a transistorized oscillator, internal and external crystal sockets, tuned circuits and front mounted controls and switches. It requires a separate 6

GUARANTEED PERFORMANCE SPECIFICATIONS

PEAKING GENERATOR

MODEL	SLN6057A
FREQUENCY	crystal controlled output from 4 mc through 960 mc
TRANSISTOR COMPLEMENT & FUNCTION	(1) oscillator
POWER SUPPLY	6 v d-c



MOTOROLA INC.

Engineering Publications

4501 W. Augusta Blvd.

COMMUNICATIONS DIVISION

Chicago 51, Illinois

REVISIONS				
DIAG ISSUE	CHASSIS AND SUFFIX NO.	REF. SYMBOL	CHANGE	LOCATION
Q1	SLN6056A	BT1	WAS 60B852116	Q1
		C1	WAS 23C855013	Q1 BASE
		M1	WAS 72D855099	S6 SWITCH
		Q1	WAS 48R134545	VOLTMETER AMPL.
			ADDED NOTE	PARTS LIST
Q2	SLN6056A	BT1	REMOVED FROM MODEL SLN6056A TEST SET KIT	PARTS LIST
	SLN6082A	BT1	BATTERY KIT ADDED	

PARTS LIST for Diagram 63E81011A03-Q2

SLN6056A Portable Test Set

REFERENCE SYMBOL	MOTOROLA PART No.	DESCRIPTION
BT2	60B855262	<u>BATTERY, dry:</u> 1-1/2 volt; "N" size cell
C1	8K834384	<u>CAPACITOR, fixed:</u> metallized paper; tubular; .25 uf ±20%; 200 vdcw
C2	21B801139	ceramic; disc; .01 uf; +80-20%; 600 vdcw
C3	23C844927 or 23C82601A03	electrolytic; tubular; 20 uf +100-10%; 25 vdcw
C4		same as C3
C5		same as C3
C6	21B847070	ceramic; disc; 800 uuf ±10%; 600 vdcw
C7		same as C6
C8		same as C3
C9	21R114166	ceramic; disc; 30 uuf ±10%; 500 vdcw
C10		same as C9
C11	21K851299	ceramic; disc; 600 uuf ±10%; 600 vdcw
C12		same as C2
C13		same as C2
C14		same as C2
C15	21R124554	ceramic; disc; 22 uuf ±5%; 500 vdcw
C16	21R410063	ceramic; disc; 10 uuf ±5%; 500 vdcw
C17	21K852185	ceramic; disc; 36 uuf ±5%; 500 vdcw
CR1	48C847274	<u>SEMICONDUCTOR DEVICE,</u> <u>diode;</u> (SEE NOTE) germanium
CR2		same as CR1
CR3		same as CR1
CR4		same as CR1
CR5	48B857965	silicon
CR6		same as CR5
J1	9B16345	<u>CONNECTOR, receptacle:</u> female; 4 contact; polarized; round molded phenolic insulator; chassis mounted
J2	28B855267	male; 20 contact; polarized; rectangular molded black phenolic insulator; saddle mounted
J3	9B855279	<u>JACK, telephone:</u> contact arrangement of stacks, 2 form "B"
J4	9B855268	<u>CONNECTOR, receptacle:</u> female; single contact; round molded insulator; 50 ohm impedance; chassis mounted
L1	24B801876	<u>COIL, RF:</u> choke; 20 millihenries; coded BLUE dot
LS1	50C855098	<u>SPEAKER, magnetic:</u> voice coil impedance, 3, 2 ohm; power rated at 3 watt; PM type; 2" x 3"
M1	72D82534D01	<u>METER, multi-scale:</u> panel mounted; consists of 20-0-20, 0-50 ua; 0-1000 VDC, 0-15 VDC, 0-30 VDC, 0-2 VAC
P1	9B855266	<u>CONNECTOR, plug:</u> female; 20 contact; polarized; rectangular molded black phenolic insulator; cable mounted

REFERENCE SYMBOL	MOTOROLA PART No.	DESCRIPTION
P2	28B813576	<u>CONNECTOR, plug:</u> male; 11 contact; polarized; round molded black phenolic insulator; does not include 1V858293 SHELL, connector and handle and 41A483715 SPRING, connector shell retainer; shell and spring must be ordered separately
Q1	48A124326	<u>TRANSISTOR:</u> (SEE NOTE) P-N-P
Q2		same as Q1
Q3	48R134545	P-N-P; type M4545
R1	6K855337	<u>RESISTOR, fixed: carbon;</u> unless otherwise stated carbon film; 17.5K ±2%; 1/2 w; ins.
R2	6K892455	carbon film; 20 megohm ±2%; 2 w; ins.
R3	6K855329	carbon film; 300K ±2%; 1/2 w; ins.
R4	6K855330	carbon film; 600K ±2%; 1/2 w; ins.
R5		same as R3
R6	6K855332	carbon film; 360K ±2%; 1/2 w; ins.
R7	17K82839	wire-wound; 3 ohm ±10%; 5 w; ins.
R8	6R5676	27 ohm ±10%; 1 w; ins.
R9		same as R1
R10	6R6048	47K ±10%; 1/2 w; ins.
R11	18K848202	variable: carbon; 25K ±20%; .2 watt
R12	6K855331	carbon film; 30K ±2%; 1/2 w; ins.
R13	6R115017	11K ±5%; 1/2 w; ins.
R14	6R5581	3.3K ±10%; 1/2 w; ins.
R15	6R6229	1K ±10%; 1/2 w; ins.
R16	18C855263	variable: wire-wound; 5K ±20%; 1 w
R17		same as R14
R18		same as R15
R19	6R6040	680 ohm ±10%; 1/2 w; ins.
R20	6R6069	2.2K ±10%; 1/2 w; ins.
R21		same as R20
R22		same as R20
R23	6R6038	1.5K ±10%; 1/2 w; ins.
R24	6R2089	1.8K ±10%; 1/2 w; ins.
R25	6R5659	3.9K ±10%; 1/2 w; ins.
R26	6R5591	18K ±10%; 1/2 w; ins.
R27		same as R26
R28	6R5554	390 ohm ±10%; 1/2 w; ins.
S1	40C855097	<u>SWITCH,</u> rotary; 2 section; continuous; non-shorting
S2	40B855095	rotary; 3 section; 3 position; non-shorting
S3	40B855094	lever; 1 section; 3 position; non-shorting
S4	40B855096	lever; 1 section; 3 position shorting
S5	40C848230	push; contact arrangement; 2 form "A"; non-locking
S6	40B855093	rotary; 2 section; 5 position; non-shorting
W1	1V858292	<u>CABLE ASSEMBLY, special purpose:</u> Metering; includes: 30B474498 CABLE, special purpose; 12 conductor; rubber covered; 50" length required 10M519 WIRE, electrical; single conductor; #24 ga. sol.; 1" required Reference parts P1, P2

REFERENCE SYMBOL	MOTOROLA PART No.	DESCRIPTION
Y1		<u>CRYSTAL UNIT, quartz:</u> not supplied; when ordering refer to TABLE 2, Page 5 for frequency and type
Y2	Type AQL	455 kc
XY1	9K857508	<u>SOCKET, crystal:</u> female; 4 contact; square molded black bakelite base; chassis mounted
XY2	9K857509	female; 2 contact; rectangular molded black bakelite base; chassis mounted
MISCELLANEOUS NON-REFERENCED PARTS LIST		
	13A855076 36A855276	GRILLE, speaker
	36A855070	BUTTON, lever; 2 required; for reference parts S3, S4
	36A855071	KNOB, control; 2 required; for reference parts S1, S2
	55A855264 55K855265	KNOB, control; for reference part S6
	58B855270 1V855413	FASTNER, adjustable pawl: R,H. FASTNER, adjustable pawl: L,H.
		ADAPTER: UHF to BNC
		ACCESSORY CABLE ASSEMBLY: includes: 30A76858 CABLE, special purpose; 2 conductor; rubber covered; 4 ft. length required
	1V855414	28A855277 PLUG, telephone: black handle 28K855278 PLUG, telephone: red handle
		RF TEST LEAD ASSEMBLY: includes: 30B475378 CABLE, RF; coaxial; RG-58A/U; 4 ft. length req'd.
	1V855415	28B844876 CONNECTOR, plug: single contact; 2 required
		RF PROBE ASSEMBLY: includes: 30B475378 CABLE, RF; coaxial; RG-58A/U; 1 ft. length req'd
	1V855404	9B855269 JACK, telephone
	1V855411	METER PANEL ASSY. (Riveted)
	1V867350	METER PANEL COVER ASSY. (Riveted)
		CASE ASSY: includes 36E855419 CASE, test set 42B861758 HOLDER, battery 7A82479 BRACKET

SLN6082A Battery Kit

BT1	60B864085 or 60K867953	<u>BATTERY, dry:</u> 1-1/2 volt; "D" size cell; 4 req'd
-----	---------------------------	--

NOTE:

Replacement transistors and diodes must be ordered by
Motorola part number only for optimum performance.

PEAKING GENERATOR

MODEL SLN6057A



volt d-c power source. The transistorized oscillator will operate properly only with anti-resonant crystals

The peaking generator comes already mounted in the S1057A, and the S1059A Portable Test Sets. It may also be purchased as a separate item to be mounted in the TU546, S1056A, or the S1058A Portable Test Sets. When mounted in the test set housing, the generator uses the battery supply built into the test set.

Refer to paragraph 7. INSTALLATION, for installing the SLN6057A Peaking Generator in the TU546, S1056A or S1058A Portable Test Set.

If the test set is used at one location and the generator is required at another location, the generator may be removed from the test set housing. A metal cover, which is part of the generator, protects the generator components when it is removed from the test set housing. To provide operating voltages, the generator can then be connected to any 6 volt d-c battery.

1. DESCRIPTION

The Model SLN6057A Peaking Generator is a crystal-controlled signal source which provides r-f signals ranging from 4 mc to 960 mc. The generator is used for peaking of the r-f stages of FM communications receivers operating within the 4 to 960 mc range. It also provides normally encountered intermediate frequencies for alignment of receiver i-f stages.

The peaking generator essentially consists of a transistorized oscillator, internal and external crystal sockets, tuned circuits and front mounted controls and switches. It requires a separate 6

GUARANTEED PERFORMANCE SPECIFICATIONS

PEAKING GENERATOR

MODEL	SLN6057A
FREQUENCY	crystal controlled output from 4 mc through 960 mc
TRANSISTOR COMPLEMENT & FUNCTION	(1) oscillator
POWER SUPPLY	6 v d-c



MOTOROLA INC.

Engineering Publications

4501 W. Augusta Blvd.

COMMUNICATIONS DIVISION

Chicago 51, Illinois

2. CONTROLS

a. CRYSTAL

The CRYSTAL switch is a 9 position switch located on the front of the generator. Positions 1 through 8 correspond to eight numbered internal crystal positions, which permit selection of up to eight test frequencies.

The EXT. position on the switch selects the three external crystal sockets. Only one crystal should be used at a time when using the EXT. position.

An anti-resonant, ovenized transmitter control crystal may be used without using the crystal heater.

b. SET LEVEL and ATTENUATOR

Operation of the SET LEVEL and ATTENUATOR varies the amount of oscillator current, which also controls the output level of the generator.

CAUTION

Some frequency shift may be encountered with adjustment of the SET LEVEL or ATTENUATOR

The ATTENUATOR is a smaller adjustable resistance which is useful in adjusting the output of the 890-960 mc tuned circuit to a pre-determined level and also for making fine adjustments of the SET LEVEL. Both controls are labeled from 0 to 10. This labeling enables re-setting of the controls after they have been checked against a signal generator of known accuracy or against the diode current reading indicated on the portable test set meter.

c. FREQ. ADJUST

The FREQ. ADJUST control provides fine tuning correction (warping) of the crystal frequency. This control should be used only to "zero" the crystal frequency. It is important to note that a change in frequency may cause a change in the output level.

d. RANGE

Operation of the RANGE switch selects a warping circuit for a range of crystal frequencies and also selects the proper output circuit to correspond to the frequency range.

Position OFF - Battery circuit is opened. This position is useful in checking quieting reference level.

Position LO - Crystals from 4 to 8 mc. This position provides a useful harmonic output up to 470 mc for alignment of receivers in the 25 to 470 mc range.

Position HI - Crystals from 9 to 9.6 mc. This position provides a useful harmonic output from 890 to 960 mc.

To eliminate any low order harmonics which may be encountered in any of the intermediate frequency bands, when using positions LO or HI, the crystals available for use with the peaking generator are specially selected to prevent low order harmonic interference. An example of this is as follows: channel frequency - 420.0 mc crystal used - 7.0 mc. If this crystal is used in the peaking generator and the receiver being tested has a first i-f of 21.0 mc, then the third harmonic of the crystal ($3 \times 7.0 \text{ mc} = 21 \text{ mc}$) may interfere during the r-f alignment.

When using transmitter crystals, the possibility of i-f interference should be considered.

3. CALIBRATION

The peaking generator can be checked against a signal generator of known accuracy using an FM communications receiver as a tuned voltmeter.

a. Meter Discriminator and Limiter--connect the metering cable from the test set to the receiver.

b. Interconnect Signal Generator and Radio Set--connect the r-f probe from the signal generator to the antenna receptacle on the radio set.

c. Zero Signal Generator Frequency--set the signal generator to the exact receiver frequency.

d. Adjust Signal Generator Output--adjust output to approximately 1 microvolt. Note the limiter reading (Position Selector switch in position #2).

e. Replace Signal Generator with Peaking Generator--remove the signal generator cable and connect the peaking generator r-f cable to the antenna receptacle on the radio set.

f. Adjust Frequency to Exact Receiver Frequency--place the Position Selector switch in position #4. Adjust the frequency output of the peaking generator to the exact receiver frequency.

g. Adjust SET LEVEL and/or ATTENUATOR--adjust the SET LEVEL and/or ATTENUATOR for the same limiter reading as in step d. above. Recheck the FREQ. ADJUST. Record the exact position of the SET LEVEL and ATTENUATOR controls to eliminate the above procedures in subsequent receiver checking.

4. OUTPUT CIRCUITS

There is an adjustable capacitor in each output circuit. One circuit is peaked at approximately 460 mc (C1 on Schematic Diagram) and needs no further adjustment. The other circuit is repeaked between 890-960 mc (C2 on Schematic Diagram) and should be peaked for maximum output on the test frequency.

The trimmer capacitor C5, across the transistor emitter-base has been factory adjusted for maximum output and warp at 460 mc and should not require adjustment unless the transistor is replaced.

5. OPERATING INSTRUCTIONS

General procedures for setting up the peaking generator for r-f peaking of an FM communications receiver are as follows:

- a. Rotate the CRYSTAL switch to select the crystal frequency to be used.
- b. Place the RANGE switch in position LO or HI depending on the crystal fundamental frequency and the output frequency desired.
- c. Adjust the SET LEVEL and the ATTENUATOR for the output level desired.
- d. Rotate the FREQ. ADJUST to warp the crystal to the test frequency.

NOTE

When the Function Selector switch (on the Portable Test Set) is in ACCESS. position, the oscillator can be checked by observing the test set meter reading. The normal maximum reading should not be less than 10 microamperes. The reading depends to some extent on the condition of the batteries and the crystal used. The batteries may be checked by placing the Position Selector switch on the test set to position #13 (Function Selector switch in RCVR or XMTR).

To conserve battery life when the generator is not in use, place the RANGE switch in the OFF position. The batteries are also disconnected from the peaking generator circuit when the 20-pin metering plug is not plugged into the 20-pin receptacle in the test set.

6. CRYSTALS

Crystals are not supplied with the peaking generator, but are available on separate order. RF outputs ranging in frequency from 4 to 960 mc are produced from crystals which range in frequency from 4 to 9.6 mc. The frequency of the crystal required to produce the desired r-f output must be calculated from the formulas given in Table 1. In general, any anti-resonant type transmitter crystal may be used if the frequency is correct.

A maximum of 9 crystals may be plugged into the 8 internal sockets and 3 external sockets (only one of the external sockets may be used at a time because all three are connected in parallel). The 8 internal sockets and one of the external sockets (XY5) will accept ANL, AUL, or AULX type crystals. Another external socket (XY6) accepts SFMT type crystals, and the remaining external socket (XY7) takes AN type crystals. After calculating the crystal frequency by using Table 1, the crystal type may be selected from Table 2. It is usually advantageous to choose an ANL, AUL, or AULX type since these types fit in either the internal or external sockets. When ordering, give both the type and frequency of the crystal desired.

TABLE 1

Crystal Calculations for SLN6057A Peaking Generator

F_c = Desired generator output frequency

F_x = Crystal Frequency required

F_c	F_x	F_c	F_x	F_c	F_x	F_c	F_x
4-8 mc	$F_x = F_c$	48-54 mc	$F_x = \frac{F_c}{8}$	134-141 mc	$F_x = \frac{F_c}{19}$	407-423 mc	$F_x = \frac{F_c}{54}$
8-15 mc	$F_x = \frac{F_c}{2}$	54-65 mc	$F_x = \frac{F_c}{9}$	141-147 mc	$F_x = \frac{F_c}{20}$	423-438 mc	$F_x = \frac{F_c}{56}$
25-30 mc	$F_x = \frac{F_c}{4}$	65-72 mc	$F_x = \frac{F_c}{10}$	147-154 mc	$F_x = \frac{F_c}{21}$	438-452 mc	$F_x = \frac{F_c}{58}$
30-36 mc	$F_x = \frac{F_c}{5}$	72-80 mc	$F_x = \frac{F_c}{11}$	154-161 mc	$F_x = \frac{F_c}{22}$	452-470 mc	$F_x = \frac{F_c}{60}$
36-42 mc	$F_x = \frac{F_c}{6}$	80-90 mc	$F_x = \frac{F_c}{12}$	161-174 mc	$F_x = \frac{F_c}{23}$	890-920 mc	$F_x = \frac{F_c}{97}$
42-48 mc	$F_x = \frac{F_c}{7}$	127-134 mc	$F_x = \frac{F_c}{18}$	393-407 mc	$F_x = \frac{F_c}{52}$	920-960 mc	$F_x = \frac{F_c}{100}$

TABLE 2

Crystal Type Available and Their
Frequency Range

<u>Crystal Frequency</u>	<u>Motorola Type</u>
2000-6000 kc	ANL and AN
6000-10000 kc	AUL and AULX
10000-13000 kc	ANL and AN

7. INSTALLATION

a. Portable Test Set

The front panel of the TU546 and the S1056A Portable Test Set has two removable panels. The open partition provided by removal of the lower panel is for mounting the peaking generator.

The front panel of the S1058A Portable Test Set has one removable panel. This is located between the Deviation Meter Panel and the meter face. The removal of this panel provides the open partition for mounting the peaking generator.

Open the front of the test set. Insert the four wires through the hole in the corner of the partition and then through the same sleeving as the battery wires. Connect the four wires from the generator to the test set as follows:

(1) Connect the BLACK-GREEN wire to the BLACK-GREEN wire on the oscillator and meter reversing switch.

(2) Connect the RED-BLACK wire to the RED-BLACK wire on the oscillator and meter reversing switch.

(3) Connect the ORANGE wire to pin #19 on the 20-pin receptacle.

(4) Connect the GREEN wire to pin #13 on the 20-pin receptacle.

b. Separate Mounting


If the peaking generator is to be installed in any place other than in the portable test set housing, make the electrical connections as follows:

(1) Connect the BLACK-GREEN wire from the generator to the positive terminal of a 50 microampere meter.


(2) Connect the RED-BLACK wire to the negative terminal of a 50 microampere meter.

(3) Connect the GREEN wire to the negative terminal of a 6 volt d-c source.

(4) Connect the ORANGE wire to the positive terminal of the 6 volt d-c source.

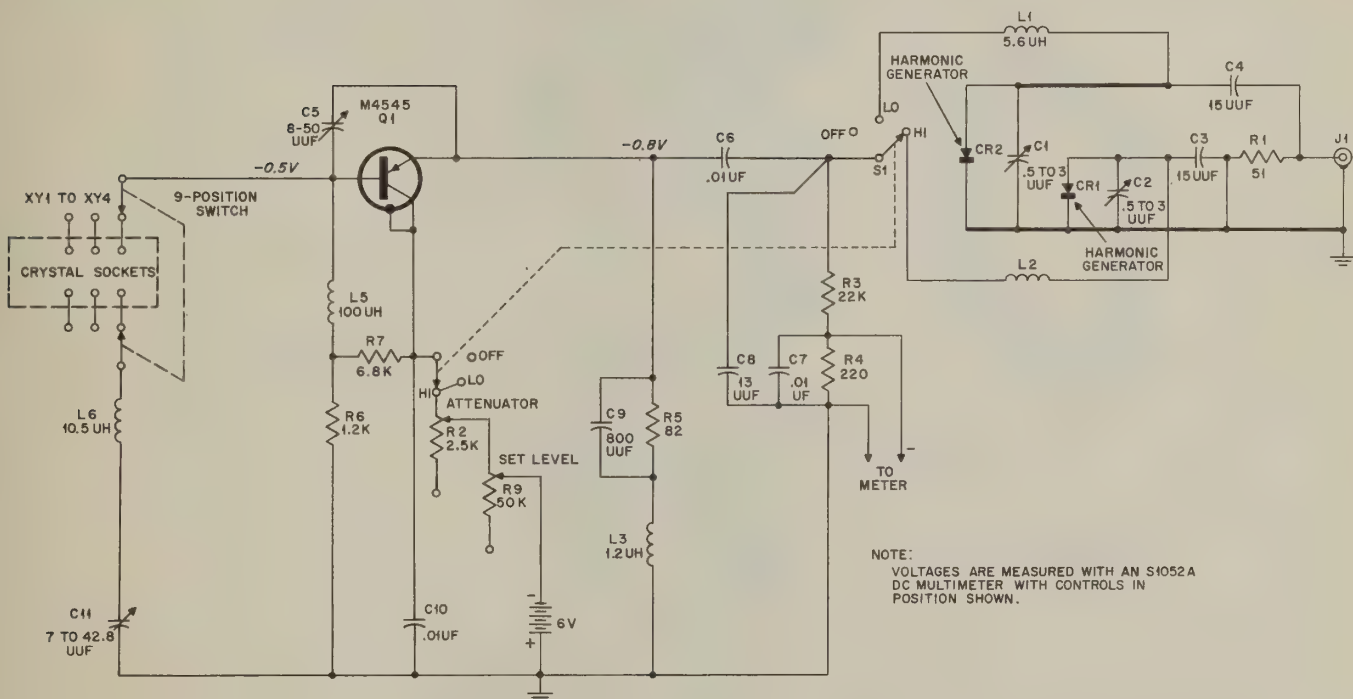

SLN6057A Peaking Generator
Simplified Circuit Diagram

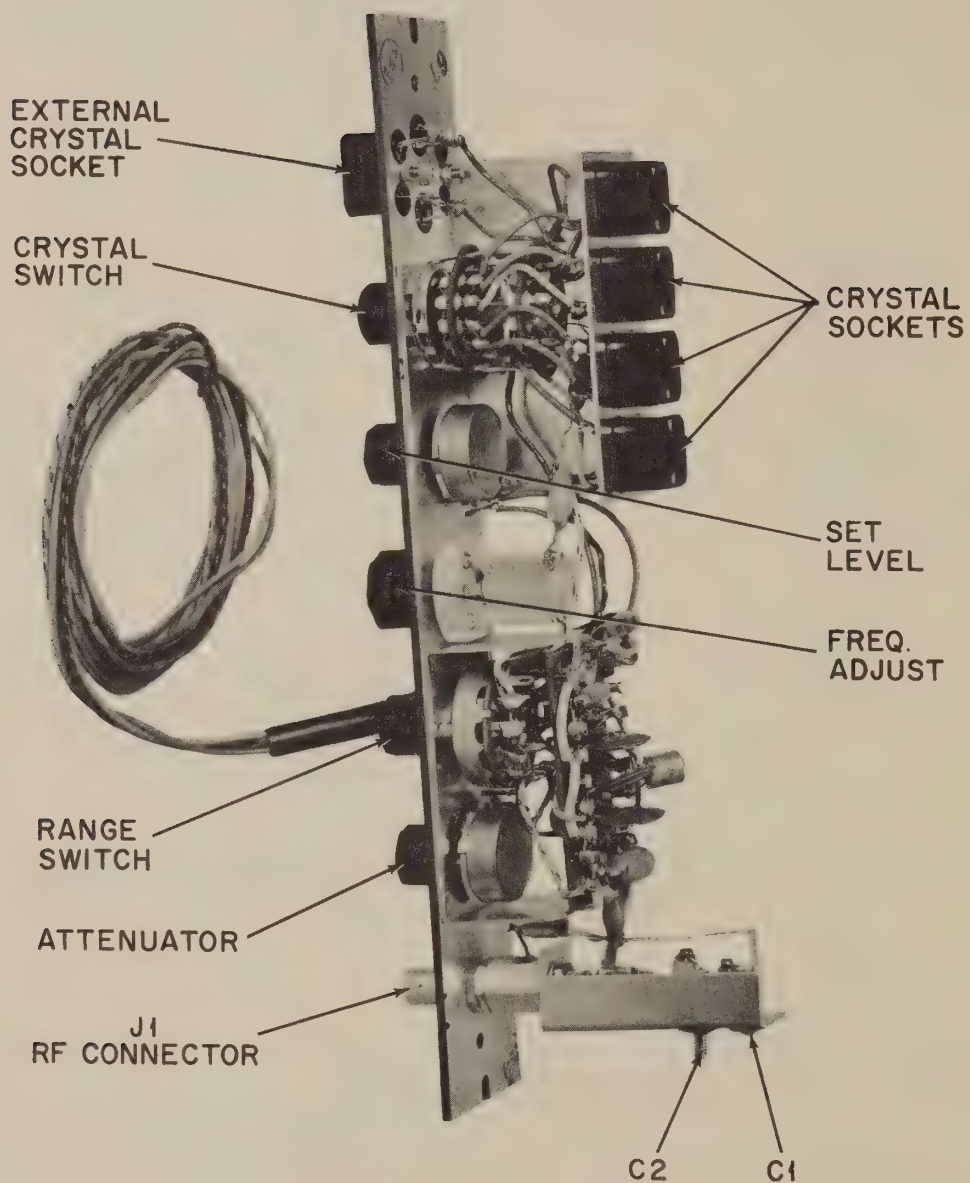



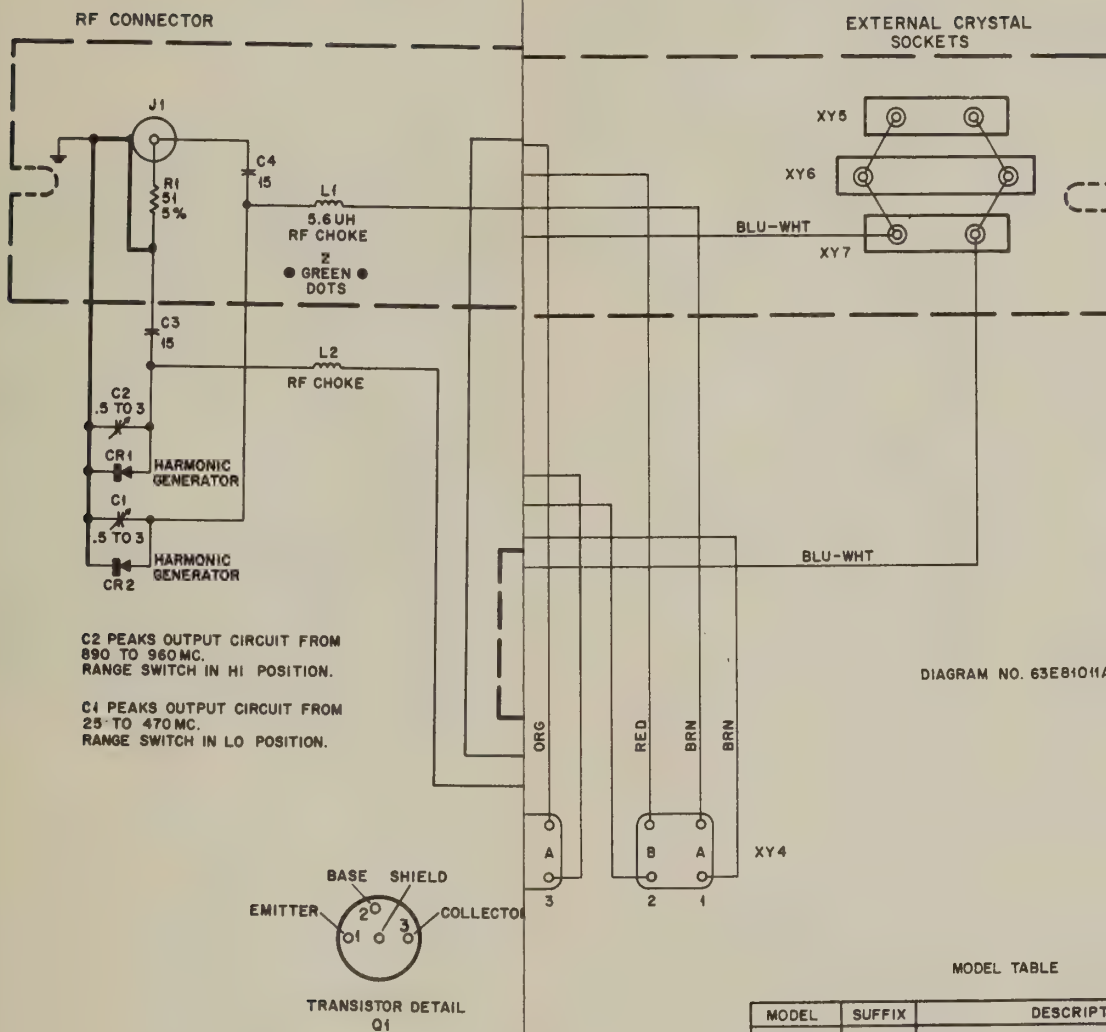


DIAGRAM NO. 63E8101A06

OR AND


UNLESS OTHERWISE STATED.
MICROFARADS

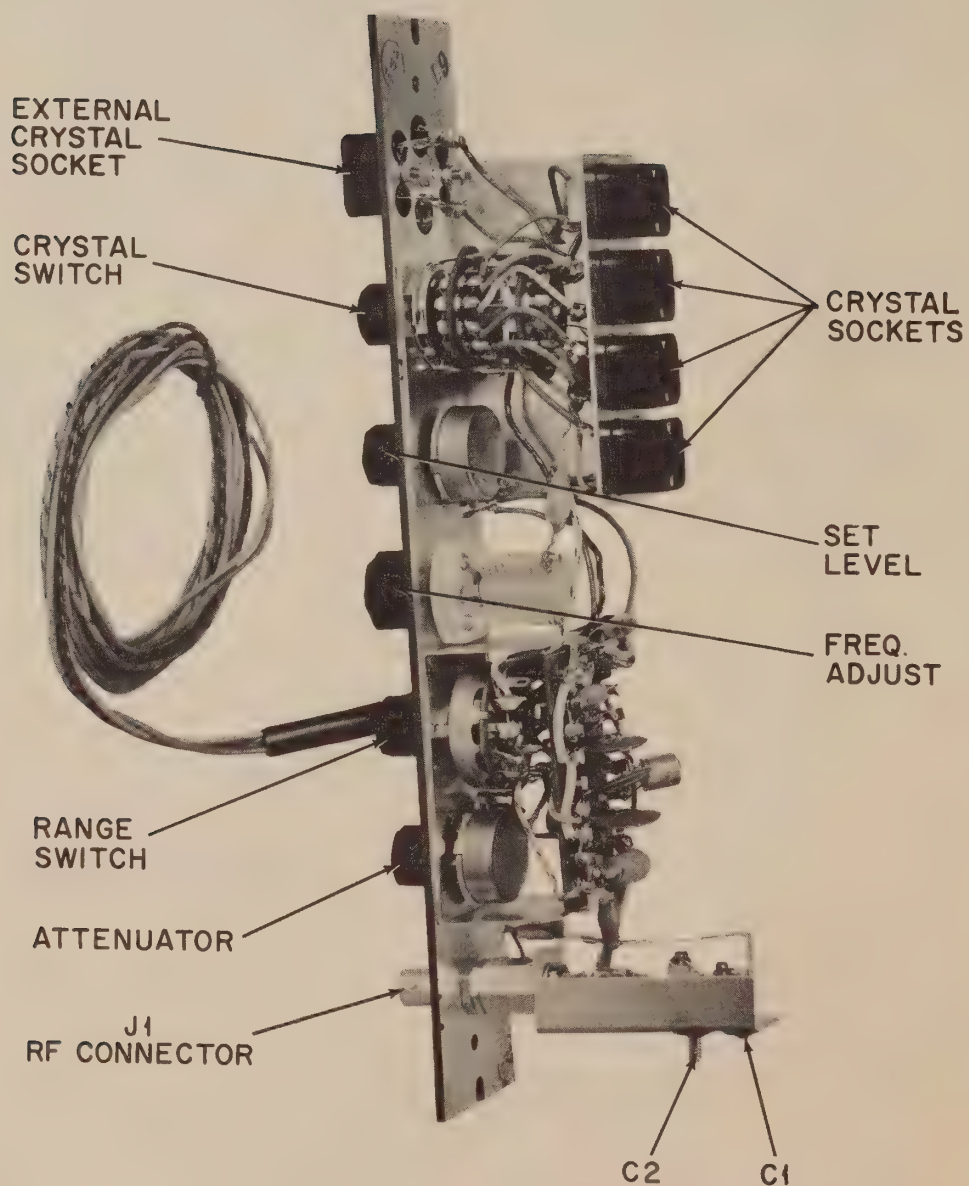

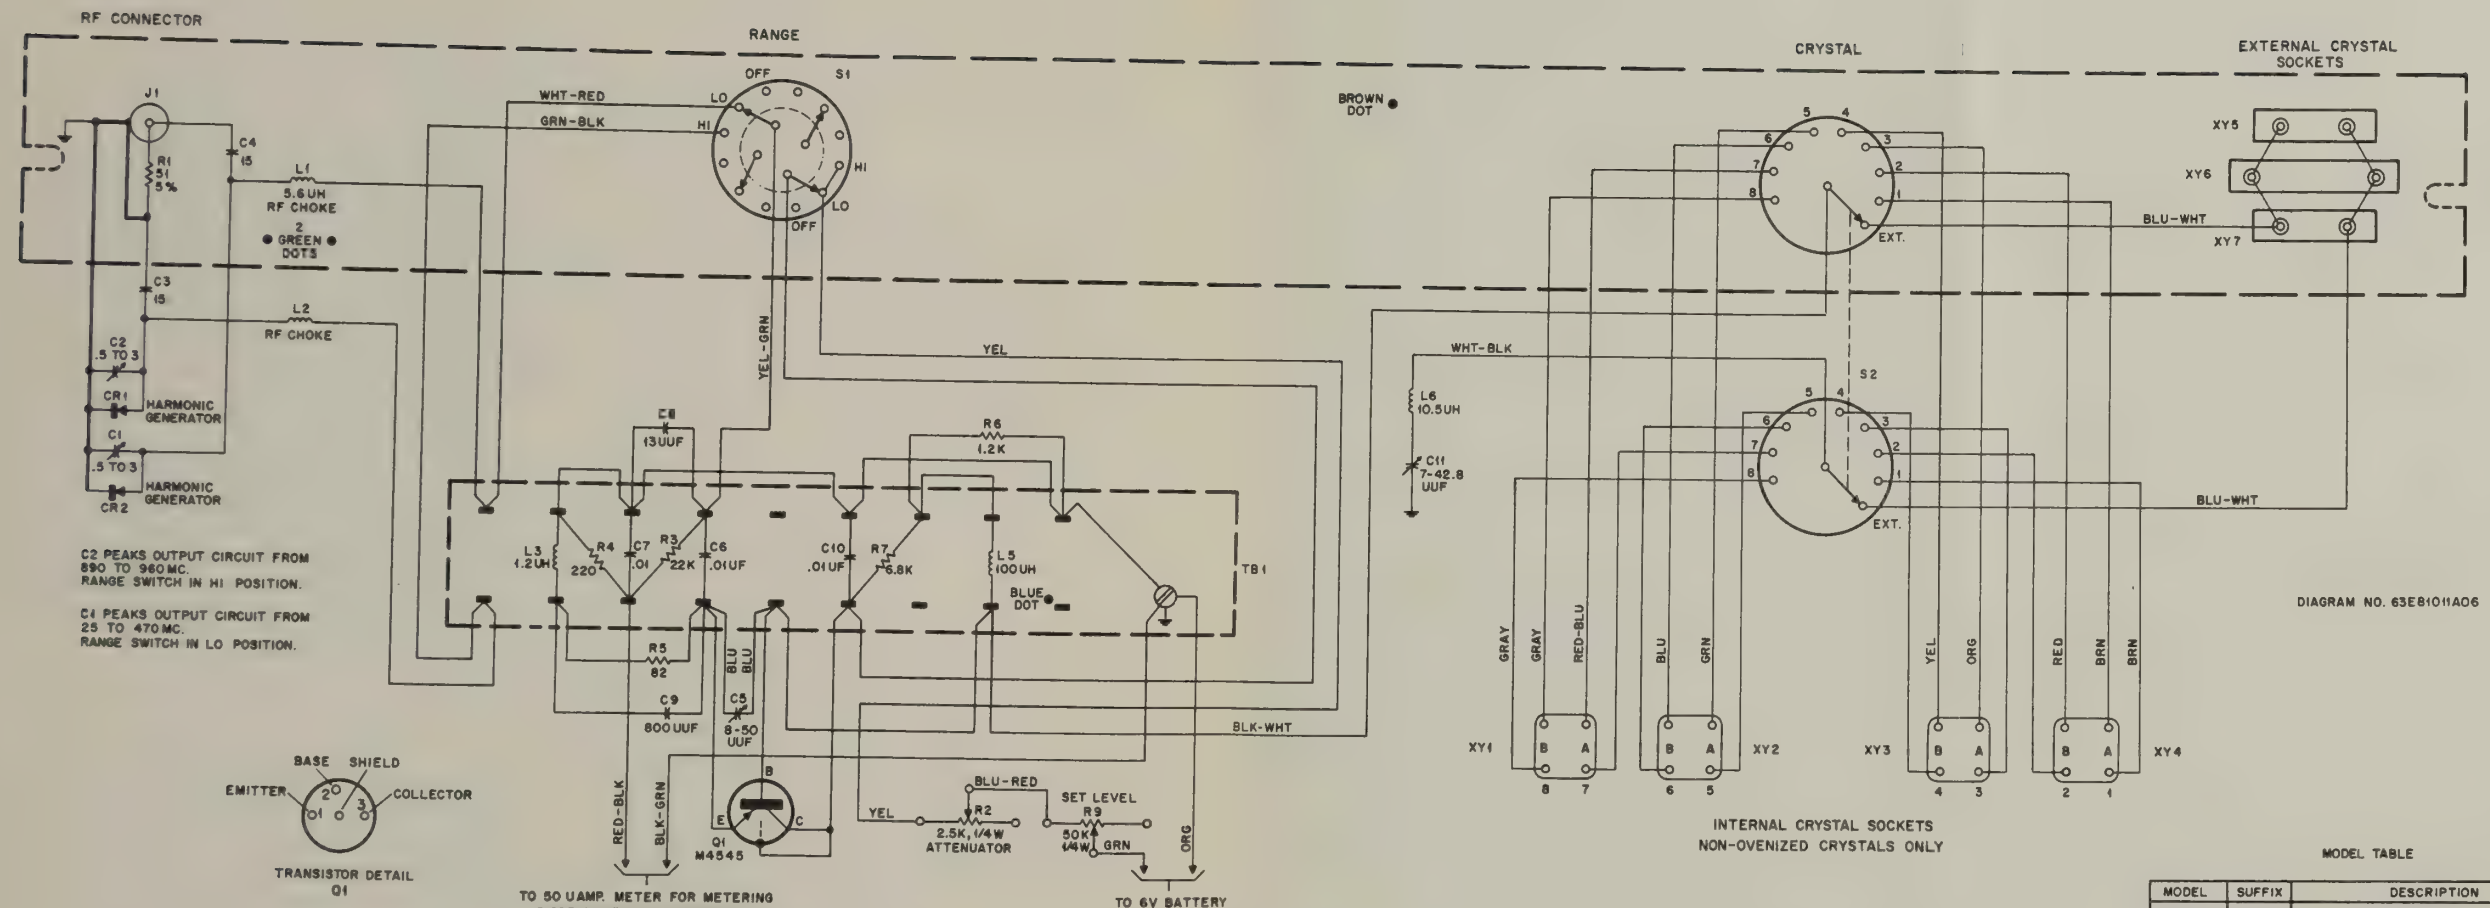

C2 PEAKS OUTPUT CIRCUIT FROM 890 TO 960 MC. RANGE SWITCH IN HI POSITION.

C1 PEAKS OUTPUT CIRCUIT FROM 25 TO 470 MC. RANGE SWITCH IN LO POSITION.

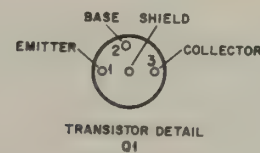

TO 50 UAMP METER FOR METERING DIODE MULTIPLIER CURRENT

IF USED WITH TU546, S1056A OR S1058A TEST SET:

- (1) CONNECT BLK-GRN TO BLK-GRN WIRE ON METER REV. SWITCH (S6).
- (2) CONNECT RED-BLK TO RED-BLK WIRE ON METER REV. SWITCH (S6).

TO 6V BATTERY

IF USED WITH TU546, S1056A OR S1058A TEST SET:

- (1) CONNECT ORG TO PIN NO. 19 ON 20-PIN RECEPTACLE.
- (2) CONNECT GRN TO PIN NO. 13 ON 20-PIN RECEPTACLE.

NOTES:

1. VOLTAGE READINGS TAKEN WITH ATTENUATOR AND SET LEVEL CONTROLS FULLY CLOCKWISE.
2. ALL RESISTORS ARE INDICATED IN OHMS, 1/2W, UNLESS OTHERWISE STATED.
3. ALL CAPACITORS ARE INDICATED IN MICROMICROFARADS UNLESS OTHERWISE STATED.

DEVIATION METER PANEL

MODEL SLN1000A

AND

CONVERSION KIT

MODEL S1062A



CUIT DESCRIPTION, for a more detailed circuit description.

The Model S1062A Deviation Meter Conversion Kit is used to add a deviation meter panel to the Motorola Model TU546, TU546P, S1056A or S1057A Portable Test Set. The kit includes a Motorola Model SLN1000A Deviation Meter Panel and a panel meter (Motorola Model SLN6062A). Since the meter must be calibrated with the deviation meter panel, the original meter in the test set must be replaced with the meter supplied in the conversion kit. For installation information, refer to paragraph 11, INSTALLING THE CONVERSION KIT.

2. OPERATING INSTRUCTIONS

a. Test Set Controls

(1) Place the position selector switch in position 15.

(2) Place the function selector switch in RCVR or XMTR position.

b. Deviation Meter Panel

(1) Connect the antenna to ANT. connector. See paragraph 5, INPUT SIGNAL REQUIREMENTS.

(2) Connect earphones (1000 ohms) or an oscilloscope to the AUD. MON. jack. A phone plug is supplied for this purpose.

(3) Place the function switch in the BATT. CHK. position. Meter indication should be at or above the red line (10.5 on 16 kc deviation scale).

1. DESCRIPTION

The Model SLN1000A Deviation Meter is a transistorized receiver for measuring the deviation of FM transmitters in the 20 to 500 mc frequency range. A Model SLN6057A Peaking Generator or T1034B Signal Generator (or equivalent) is required for the local oscillator.

The deviation meter has its own internal power supply which consists of two 6-1/2-volt mercury batteries. If desired, an external power supply can be used in place of the batteries.

The unit is mounted in the S1058A and S1059A Portable Test Sets. Refer to paragraph 8. CIR-



MOTOROLA INC.

Engineering Publications

4501 W. Augusta Blvd.

COMMUNICATIONS DIVISION

Chicago 51, Illinois

PARTS LIST for Diagram 63E81011A06-O

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
C1, 2	20A858351	CAPACITOR, fixed: unl stated var: 0.5 uuf min. to 3 uuf max. assy; incl 21K835358 CAPACI- TOR, fixed: 15 uuf ±10%; 500 v 42A858406 CLIP, mtg.
C3	1V858438	
C4	1V858439	assy; incl 21K835358 CAPACI- TOR, fixed: 15 uuf ±10%; 500 v 42A858404 CLIP, mtg.
C5	20K840719	var; 8-50 uuf
C6, 7, 10	21B801139	.01 uf +80-20%; 600 v
C8	21K865358	13 uuf ±5%; 500 v
C9	21B847070	800 uuf ±10%; 600 v
C11	19A475604	var: 7 uuf min. to 42.8 uuf max.
CR1, 2	48A82616B01	SEMICONDUCTOR DEVICE, diode: SEE NOTE germanium (factory selected)
J1	9B855268	CONNECTOR, receptacle: female; single contact; type BNC
L1	24A813564	COIL, RF: choke; 5.6 uh; coded GRN-GRN
L2	24B858421	60 turns
L3	24K800899	1.2 uh
L5	24A832402	100 uh; coded BLU
L6	24K859163	10.5 uh
Q1	48R134545	TRANSISTOR: SEE NOTE P-N-P; type M4545
R1	6R5648	RESISTOR, fixed: ±10%; 1/2 w; unl stated 51 ±5%
R2	18K858468	var: 2.5K ±30%; 1/4 w
R3	6R6397	22K
R4	6R6270	220
R5	6R2035	82
R6	6R6393	1.2K
R7	6R6428	6.8K
R9	18K858469	var: 50K ±20%; 1/4 w
S1	40K801196	SWITCH, rotary: 4 pole; 3 position
S2	or 40B82391D01 40B858122	2 pole; 9 position
TB1	31A835961	BOARD, terminal; 18 solder lug terminals
XY1, 2, 3, 4	9K857508	SOCKET, crystal: female; 4 contact
XY5	9K857509	2 contact
XY6	9K82810	2 contact
XY7	9K861367	2 contact

NOTE:

Replacement transistors and diodes must be ordered by
Motorola part number only for optimum performance.

DEVIATION METER PANEL

MODEL SLN1000A

AND

CONVERSION KIT

MODEL S1062A



CUIT DESCRIPTION, for a more detailed circuit description.

The Model S1062A Deviation Meter Conversion Kit is used to add a deviation meter panel to the Motorola Model TU546, TU546P, S1056A or S1057A Portable Test Set. The kit includes a Motorola Model SLN1000A Deviation Meter Panel and a panel meter (Motorola Model SLN6062A). Since the meter must be calibrated with the deviation meter panel, the original meter in the test set must be replaced with the meter supplied in the conversion kit. For installation information, refer to paragraph 11, INSTALLING THE CONVERSION KIT.

2. OPERATING INSTRUCTIONS

a. Test Set Controls

(1) Place the position selector switch in position 15.

(2) Place the function selector switch in RCVR or XMTR position.

b. Deviation Meter Panel

(1) Connect the antenna to ANT. connector. See paragraph 5, INPUT SIGNAL REQUIREMENTS.

(2) Connect earphones (1000 ohms) or an oscilloscope to the AUD. MON. jack. A phone plug is supplied for this purpose.

(3) Place the function switch in the BATT. CHK. position. Meter indication should be at or above the red line (10.5 on 16 kc deviation scale).

1. DESCRIPTION

The Model SLN1000A Deviation Meter is a transistorized receiver for measuring the deviation of FM transmitters in the 20 to 500 mc frequency range. A Model SLN6057A Peaking Generator or T1034B Signal Generator (or equivalent) is required for the local oscillator.

The deviation meter has its own internal power supply which consists of two 6-1/2-volt mercury batteries. If desired, an external power supply can be used in place of the batteries.

The unit is mounted in the S1058A and S1059A Portable Test Sets. Refer to paragraph 8, CIR-



MOTOROLA INC.

Engineering Publications

4501 W. Augusta Blvd.

COMMUNICATIONS DIVISION

Chicago 51, Illinois

GUARANTEED PERFORMANCE SPECIFICATIONS

MODEL		SLN1000A
CARRIER FREQUENCY RANGE		20 to 500 mc
DEVIATION RANGES		16 kc, 8 kc & 1.6 kc full scale
ACCURACY	16 KC RANGE	±5% at 15 kc, ±5% of full scale otherwise
	8 KC RANGE	±5% at 5 & 6.67 kc, ±5% of full scale otherwise
	1.6 KC RANGE	±10% of full scale
SENSITIVITY WITH PEAKING GENERATOR	25-54 MC	1 millivolt
	144-174 MC	3 millivolts
	450-470 MC	20 millivolts
SENSITIVITY WITH .1 V SIGNAL GEN. ON FUNDAMENTALS	25-54 MC	1 millivolt
	144-174 MC	3 millivolts
	450-470 MC	20 millivolts
DEVIATION READING		1/2 x (sum of pos. and neg. peaks)
OPERATING TEMPERATURE RANGE	MERCURY BATTERIES	+10°C to +50°C
	EXTERNAL POWER	0°C to +50°C
BATTERY LIFE		40 hours with SLN6046A Mercury Battery Kit (room temperature)

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

(4) Connect an external oscillator to the OSC. connector. The Motorola Model TK589 or SLN6057A Peaking Generator or Model T1034B Signal Generator or equivalent may be used.

(a) TK589 or SLN6057A Peaking Generator

1. Calculate the crystal frequency using the applicable formula in TABLE 1. and insert crystal in the appropriate socket on the peaking generator.

TABLE 1.

F _c (MC)	F _x	F _c (MC)	F _x
25-30	$F_x = \frac{F_c \pm .455}{4}$	134-141	$F_x = \frac{F_c \pm .455}{19}$
30-36	$F_x = \frac{F_c \pm .455}{5}$	141-147	$F_x = \frac{F_c \pm .455}{20}$
36-42	$F_x = \frac{F_c \pm .455}{6}$	147-154	$F_x = \frac{F_c \pm .455}{21}$
42-48	$F_x = \frac{F_c \pm .455}{7}$	154-161	$F_x = \frac{F_c \pm .455}{22}$
48-54	$F_x = \frac{F_c \pm .455}{8}$	161-174	$F_x = \frac{F_c \pm .455}{23}$
54-65	$F_x = \frac{F_c \pm .455}{9}$	393-407	$F_x = \frac{F_c \pm .455}{52}$
65-72	$F_x = \frac{F_c \pm .455}{10}$	407-423	$F_x = \frac{F_c \pm .455}{54}$
72-80	$F_x = \frac{F_c \pm .455}{11}$	423-438	$F_x = \frac{F_c \pm .455}{56}$
80-90	$F_x = \frac{F_c \pm .455}{12}$	438-452	$F_x = \frac{F_c \pm .455}{58}$
127-134	$F_x = \frac{F_c \pm .455}{18}$	452-470	$F_x = \frac{F_c \pm .455}{60}$

F_x = Crystal Frequency

F_c = Transmitter Frequency

NOTE

When ordering crystals for the peaking generator to be used with the deviation meter, specify Motorola Type AULX and transmitter and/or crystal frequency.

2. Connect the output of the peaking generator to the OSC. connector on the deviation meter panel using the Motorola Model SKN6007A Cable Kit.

3. Adjust the SET LEVEL control for maximum output (fully clockwise).

4. Key the transmitter and adjust the FREQ. ADJUST control for zero meter indication with the function switch on the deviation meter panel in the DISC. + or DISC. - positions.

5. Place the function switch on the deviation meter panel in the LIM. position and adjust the ATTENUATOR control on the peaking generator for maximum meter indication. Maximum setting of the ATTENUATOR control is not necessarily the position of maximum harmonic output and the control should be advanced from zero for a maximum reading in the LIM. position.

(b) T1034B Signal Generator

1. Connect the output of the signal generator and the antenna to the antenna connector using a BNC "T" connector. Refer to paragraph 5, INPUT SIGNAL REQUIREMENTS.

2. Adjust the signal generator frequency to either 455 kc above or below the transmitter frequency.

3. Adjust the signal generator output attenuator for an output of approximately 30 millivolts. Key the transmitter and adjust the signal generator frequency for zero in DISC. + or DISC. -. Refer to paragraph 4, ERRONEOUS INDICATIONS.

(5) Place the function switch in the LEVEL SET position and key the transmitter (unmodulated except "Private-Line" tone in units equipped with this feature). Adjust the LEVEL SET control until the pointer is on the red line (10.5 kc on the deviation scale).

(6) Place the function switch in the DEV. position and the DEV. RANGE switch in the ZERO SET position. Adjust the ZERO SET control for zero meter indication.

(7) Place the DEV. RANGE switch in the applicable position (16KC for 15KC transmitters or 8 kc for 5 kc transmitters).

(8) Remove the "Vibrasender" reed from "Private-Line" transmitters. Key the transmitter preferably from the test set. The meter should indicate less than 0.5 kc on the 8KC range and less than 1.0 kc on the 16KC range for an unmodulated carrier. See paragraph 5., INPUT SIGNAL REQUIREMENTS.

(9) Replace the "Vibrasender" and modulate the transmitter with either the TEK-1A Tone Generator or by saying "aahhh" or "four" or any word which allows the deviation to remain constant. In "Private-Line" transmitters, the "Private-Line" deviation can then be checked in the 1.6KC range. If the deviation is not correct, refer to the instruction manual for the particular equipment being tested for information to reset it.

3. 960 MC TRANSMITTERS

The deviation meter is capable of measurement of transmitter deviation in units operating in the 960 mc band. These transmitters use 40 kc deviation, however, they also use multiplier stages preceding the final amplifier with a multiplication factor of 6. If deviation is measured at 1/6 the transmitter output frequency, the deviation at that frequency will be 6.67 kc. The 8 kc scale is marked at 6.67 kc for this purpose. A cable connected to the ANT. input on the deviation meter panel should be placed near the multiplier stage in the transmitter which is at 1/6 the transmitter output frequency and the same procedure as previously described can be followed.

When using the peaking generator, the "Fc" in the equations in TABLE 1. should be 1/6 the transmitter output frequency. When using the signal generator, the generator frequency should be set to 1/6 the transmitter output frequency.

4. ERRONEOUS INDICATIONS

It is possible to obtain an erroneous indication if the signal generator is not accurately calibrated. This response occurs at the transmitter frequency plus or minus 227.5 kc ($1/2 \times 455$ kc) and results in a meter indication of twice the actual deviation. To avoid this, the generator output should be reduced until meter indication starts to decrease (function switch in LIM. position). The signal generator frequency should then be adjusted through a range of 500 kc above and below the transmitter frequency while watching for the presence of a stronger response. If a stronger response is located, the generator should be left at this frequency. The generator output level should then be increased until a further increase in output level results in no increase in meter indication. After completing this procedure, recheck the generator frequency by placing the function switch in the DISC. + or DISC. - positions. Readjust the generator frequency for zero meter indication if necessary.

5. INPUT SIGNAL REQUIREMENTS

When receiving an unmodulated carrier (no voice or "Private-Line" tone), the deviation meter should indicate less than 0.5 kc on the 8KC range, or 1.0 kc on the 16KC range to insure an accurate reading. If the indications exceed the above amounts, the received signal is either too small or too great.

The Motorola Model SLN6080A Attenuator should be used on the deviation meter when it is used within 25 feet (35 feet for 450 mc transmitters) of the transmitting antenna. When not in close proximity to the antenna, the attenuator should be removed to obtain the full sensitivity of the deviation meter.

If the transmitter to be measured is accessible, it will be necessary to remove the "Vibrasender" reed to insure that a low deviation is obtained with an unmodulated carrier.

If a "Private-Line" transmitter is inaccessible and, therefore, some distance away, a check for sufficient signal can be made by attaching a clip lead to the antenna of the deviation meter. If the limiter position reading does not increase when adding the clip lead to the antenna of the deviation meter, the signal strength is sufficient to make an accurate measurement of deviation.

6. AUDIO MONITORING

The "AUD. MON." jack on the deviation meter panel is used to monitor the recovered modulation. An earphone (1000 ohms) or an oscilloscope should be connected to the jack. This is necessary in order that an interfering signal can be detected. It is also useful when a signal generator is used for a local oscillator to determine approximately the proper frequency before fine adjustment is made in DISC. + or DISC. -.

7. EXTERNAL POWER SUPPLY

A connector is provided on the deviation meter panel to enable the unit to be powered from an external source if desired. The Motorola Model T1012A or T1064A Power Supply with the TEK-15 Ripple Filter or a 10 to 14 v d-c battery which is capable of 25 ma of current may be used.

CAUTION

Damage to the equipment may result if voltages in excess of the 14 v d-c are used.

The wide pin on the connector must be connected to the positive (+) terminal of the external supply and the narrow pin must be connected to the negative (-) terminal.

Use the ON-OFF switch on the deviation meter panel to turn the equipment off after use. The internal batteries will continue to power the unit if the external power is disconnected and the switch is left in the ON position. If desired, one of the

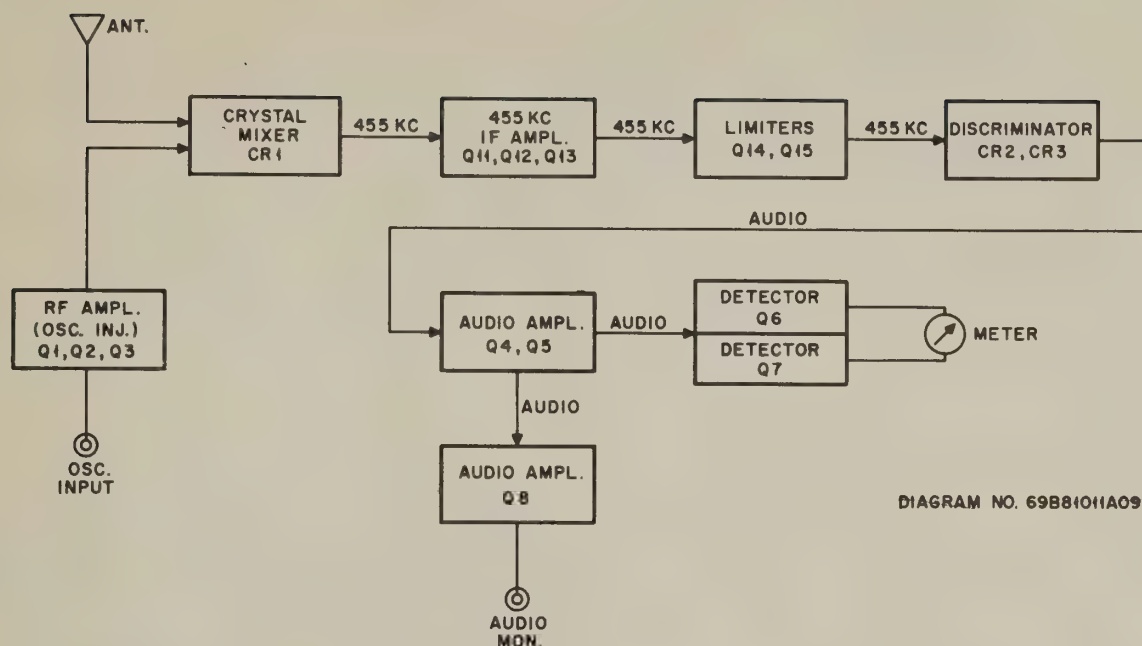


DIAGRAM NO. 69B81011A09

Deviation Meter Block Diagram

internal batteries can be removed and inserted only when the unit is to be used in the field or when an external power source is not available.

Before using an external power supply, with the internal batteries in place, put the function switch in BATT. CHK. position. Plug in the external source and note the meter reading. It should be between 45-47.5 microamperes on the 0-50 scale (second from top). If the meter indication is less than 45 microamperes, the internal batteries are powering the unit. If the meter reading is greater than 47.5 microamperes, damage to the unit may occur.

8. CIRCUIT DESCRIPTION

As shown on the block and schematic diagrams, the deviation meter is a single conversion FM receiver without a local oscillator. RF signals reaching the antenna enter the crystal mixer to heterodyne with the output of an external oscillator to produce a 455 kc intermediate frequency containing the original modulation. Two stages of amplification and an impedance matching stage are inserted between the oscillator input and the crystal mixer. The 455 kc signal passes through three stages of amplification and two limiters before entering the discriminator where frequency deviation is converted to an audio signal. The output from the discriminator enters a two stage audio amplifier using negative feed-

back. The feedback and temperature compensation prevent large variations in gain resulting from variations in transistor parameters and supply voltage. The output of the audio amplifier enters the detector stages where peak deviation is detected regardless of waveform. These stages have a fast charge characteristic in conjunction with a slow discharge characteristic to permit detection of voice modulation. However, due to the large peak-to-average voltage characteristics of voice modulation, sine wave modulation is the most accurate for deviation measurement. The output of the detectors is measured by a peak reading voltmeter which is calibrated to read half of the peak-to-peak deviation.

A third audio amplifier stage is connected to the output of the first two audio stages and its output is connected to a jack for monitoring purposes.

9. CALIBRATION

Accuracy of the instrument will be maintained with periodic calibration. This should be accomplished only by qualified personnel having adequate facilities. If desired the instrument may be returned to the factory for calibration. Return to:

Motorola Communications & Electronics, Inc.
Parts and Service Department
4910 W. Flournoy Street
Chicago 44, Illinois

10. MAINTENANCE

This instrument should be serviced only by qualified personnel experienced in repairing instruments. If qualified personnel is not available, the instrument may be returned to the factory for servicing.

a. Battery Replacement

(1) Remove the two screws from the extreme edges of the front panel and pull out the deviation meter panel.

(2) Loosen the screw at back of the cover under which the battery cover is secured.

(3) Remove the batteries and replace with fresh batteries with the polarity as shown.

(4) Replace battery cover.

b. To Remove the Cover

(1) Remove the two screws at the back face of the unit.

(2) Remove one of the batteries.

(3) Loosen the two screws in the middle of the battery board.

(4) Pull back the cover.

11. INSTALLING THE CONVERSION KIT

The following steps outline the procedure necessary to complete the installation.

a. Meter

Remove the existing meter and replace with meter supplied.

b. Deviation Meter Panel

Refer to the Installation Detail while performing the following steps.

NOTE

Steps (1) through (4) apply to the Model TU546 & TU546P Portable Test Sets only.

(1) Unsolder the 17.5K precision resistor (R9) and the WHT-BLU jumper from S1B-15.

(2) Remove jumper between S1B-14 and S1B-15.

(3) Resolder R9 and the WHT-BLU jumper to S1B-14.

(4) Remove BLU-YEL wire from S1A-15 and tape the end. This wire is no longer used.

(5) Mount the SLN1000A Deviation Meter Panel in place of blank panel at top of test set. Route WHT-RED and WHT-BLK leads along existing battery cable to S1B-15 and S1A-14.

(6) Solder WHT- RED lead to S1B-15.

(7) Solder WHT-BLK lead to S1A-15.

(8) Install batteries with polarity as indicated on battery mounting brackets if the unit is to be self powered. For use with an external power supply refer to information included under paragraph 8. EXTERNAL POWER SUPPLY.

WARNING

Do not discard mercury batteries in fire as they may explode.



S1B-15
(TOP WAFER)

S1A-15
(LOWER WAFER)

S1B-14
(TOP WAFER)


Installation Detail

DEPD-7739-B

DEPD-7738-A

REVISIONS

BOARD AND SUFFIX NO.	REF. SYMBOL	CHANGE	LOCATION
SLN6059A-2	Q7	WAS SHOWN AS TYPE P-N-P	Q7
		VOLTAGES ADDED	Q1-Q8
SLN6059A-3	L18, 19	ADD 24C82190C01, 0.148 MH	Q6 AND Q7 EMITTER

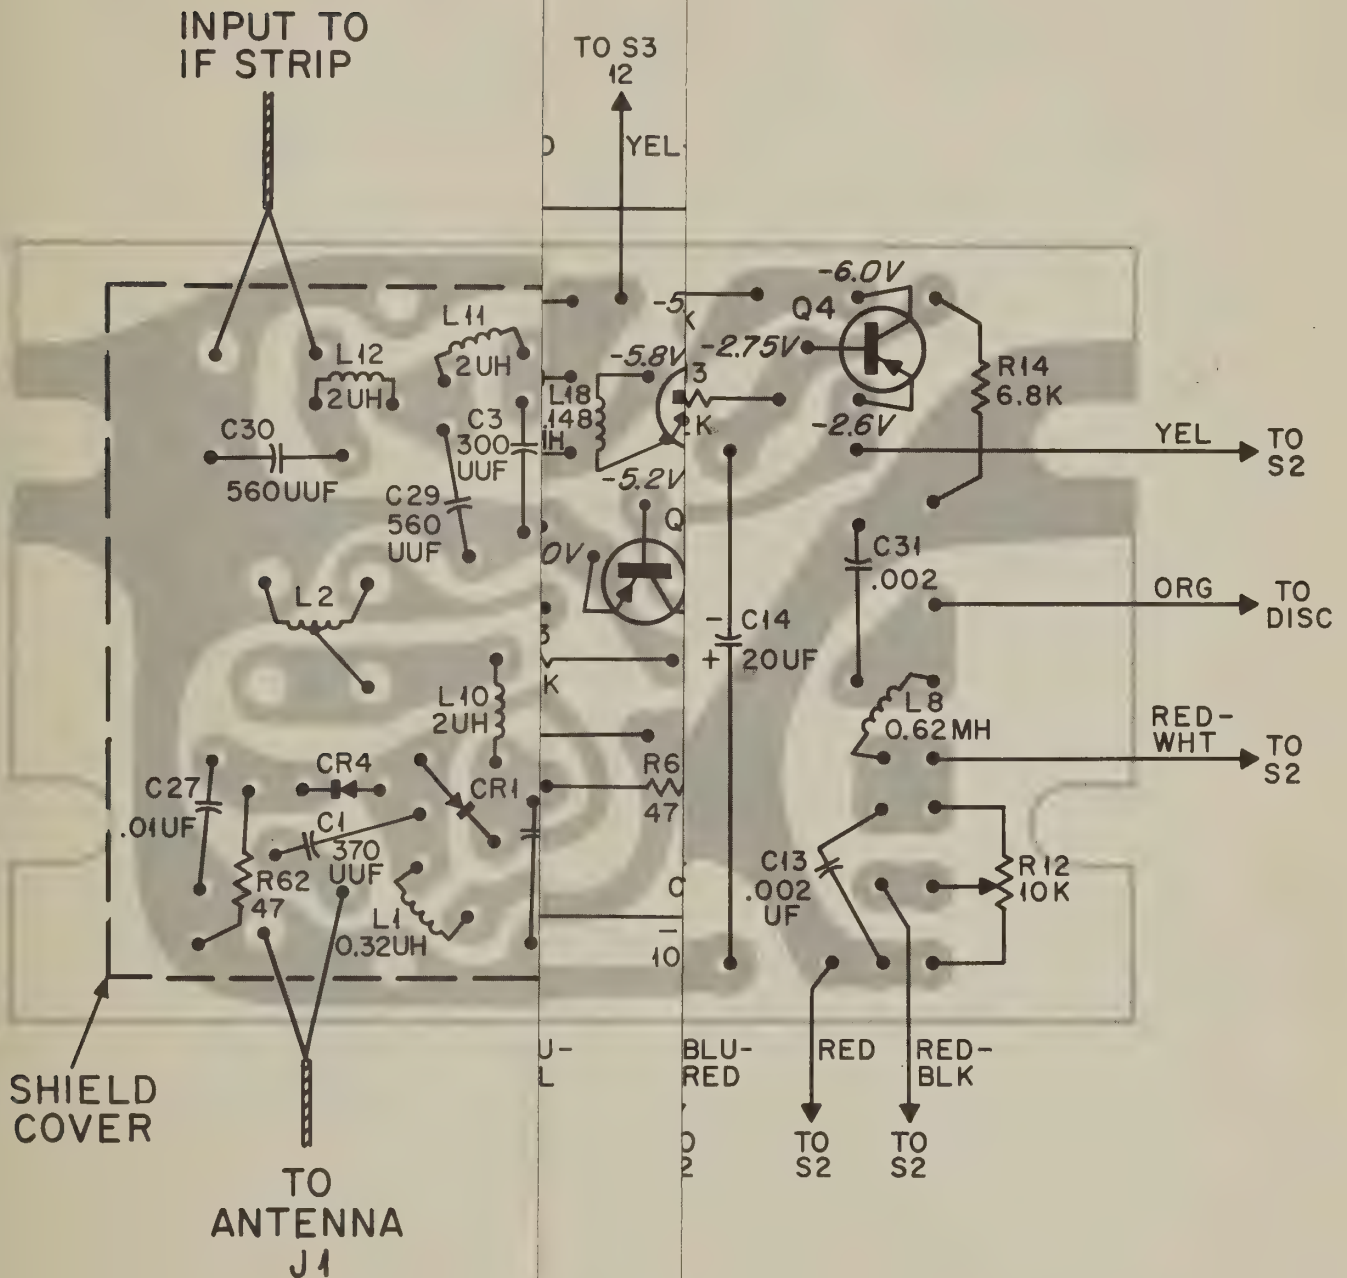

Meter Amplifier Board
 Model SLN6059A-3
 Printed Board and Wiring Diagram
 Motorola No. EPD-7740-B
 12/18/62-UM

10. MAINTENANCE

This instrument should be serviced only by qualified personnel experienced in repairing instruments. If qualified personnel is not available, the instrument may be returned to the factory for servicing.

a. Battery Replacement

(1) Remove the two screws from the extreme edges of the front panel and pull out the deviation meter panel.

(2) Loosen the screw at back of the cover under which the battery cover is secured.

(3) Remove the batteries and replace with fresh batteries with the polarity as shown.

(4) Replace battery cover.

b. To Remove the Cover

(1) Remove the two screws at the back face of the unit.

(2) Remove one of the batteries.

(3) Loosen the two screws in the middle of the battery board.

(4) Pull back the cover.

11. INSTALLING THE CONVERSION KIT

The following steps outline the procedure necessary to complete the installation.

a. Meter

Remove the existing meter and replace with meter supplied.

b. Deviation Meter Panel

Refer to the Installation Detail while performing the following steps.

NOTE

Steps (1) through (4) apply to the Model TU546 & TU546P Portable Test Sets only.

(1) Unsolder the 17.5K precision resistor (R9) and the WHT-BLU jumper from S1B-15.

(2) Remove jumper between S1B-14 and S1B-15.

(3) Resolder R9 and the WHT-BLU jumper to S1B-14.

(4) Remove BLU-YEL wire from S1A-15 and tape the end. This wire is no longer used.

(5) Mount the SLN1000A Deviation Meter Panel in place of blank panel at top of test set. Route WHT-RED and WHT-BLK leads along existing battery cable to S1B-15 and S1A-14.

(6) Solder WHT- RED lead to S1B-15.

(7) Solder WHT-BLK lead to S1A-15.

(8) Install batteries with polarity as indicated on battery mounting brackets if the unit is to be self powered. For use with an external power supply refer to information included under paragraph 8. EXTERNAL POWER SUPPLY.

WARNING

Do not discard mercury batteries in fire as they may explode.



S1B-15
(TOP WAFER)

S1A-15
(LOWER WAFER)

S1B-14
(TOP WAFER)

Installation Detail

EEPD-7729-O

EEPD-7730-A


R

OR

BASE

MITTER

COLLECTOR

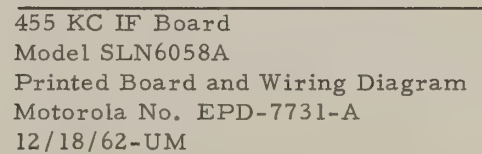

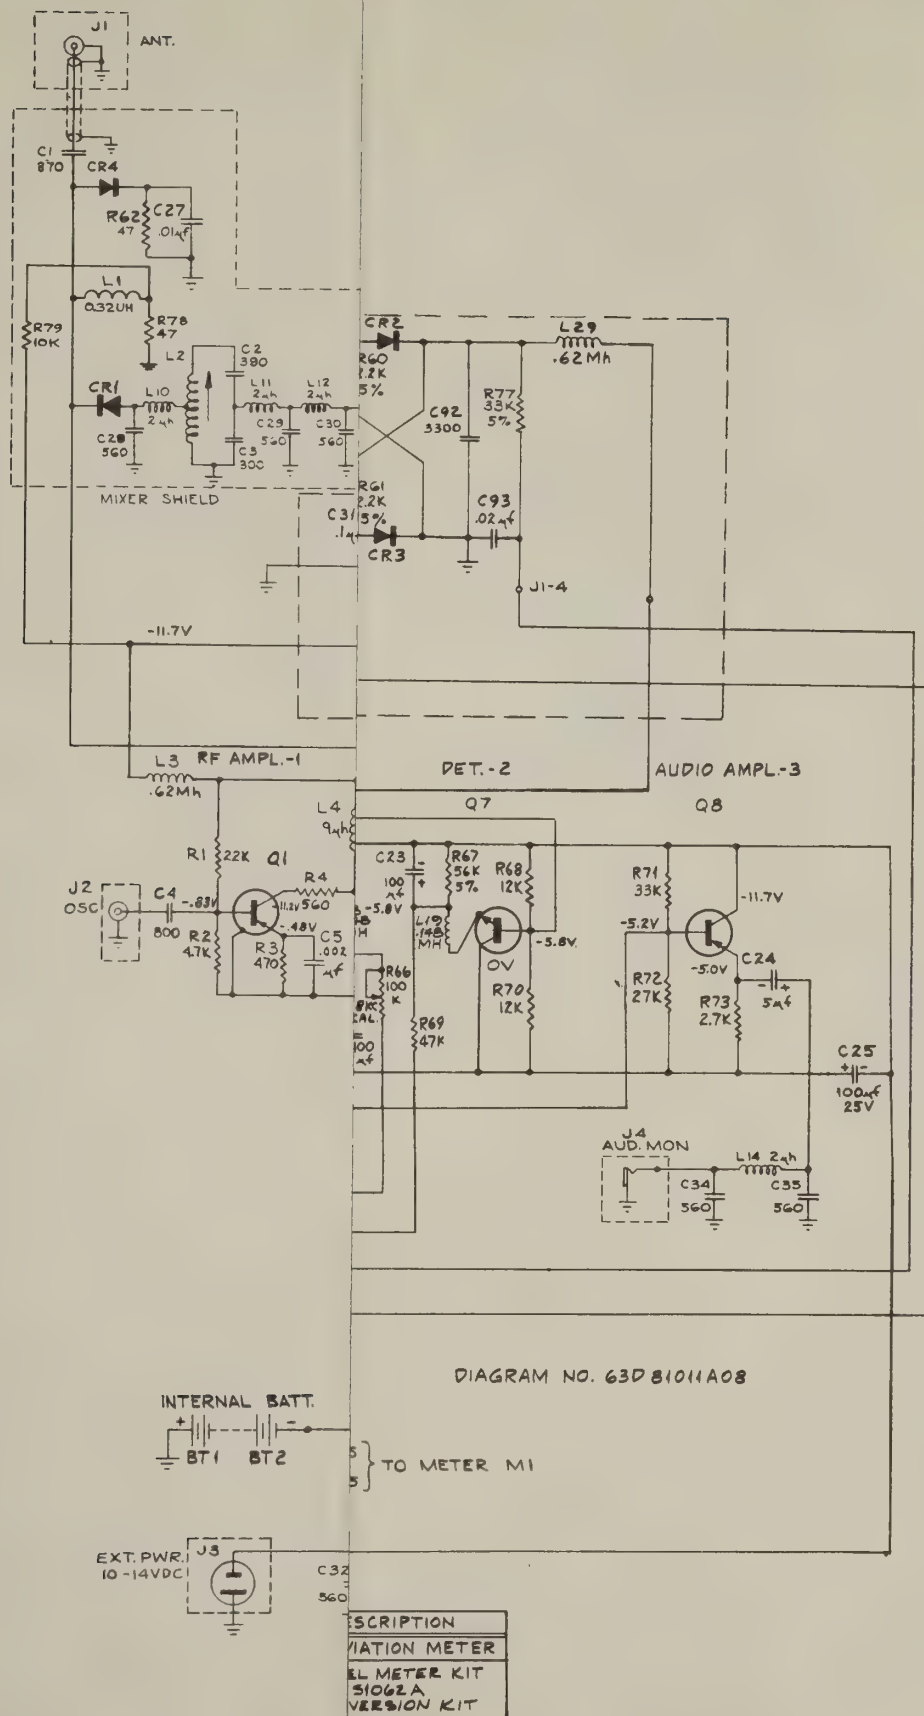



DIAGRAM NO. 63D 81011A08

DESCRIPTION
DEVIATION METER
DEL METER KIT
51062A
VERSION KIT

PREVIOUS REVISIONS LISTED
ON BACK OF THIS DIAGRAM →

SLN1000A Deviation Meter Panel
Schematic Diagram
Motorola No. 63D81011A08-C
12/18/62-UM

- NOTES:
1. UNLESS OTHERWISE STATED, CAPACITOR VALUES ARE IN MICROMICROFARADS.
 2. UNLESS OTHERWISE STATED, RESISTOR VALUES ARE IN OHMS, $\pm 10\%$, 1/4 WATT. K=1000.
 3. VOLTAGE AND RESISTANCE MEASUREMENTS MADE USING A MOTOROLA DC MULTIMETER AND ARE REFERENCED TO CHASSIS UNDER THE FOLLOWING CONDITIONS:
 - A. DEV. RANGE SWITCH IN "0" POSITION.
 - B. ZERO SET ADJUSTED FOR METER ZERO.
 - C. NO INPUT SIGNAL.
 - D. INPUT VOLTAGE FROM EXTERNAL SUPPLY AT 12VDC.
 - E. LEVEL SET FULL CLOCKWISE.

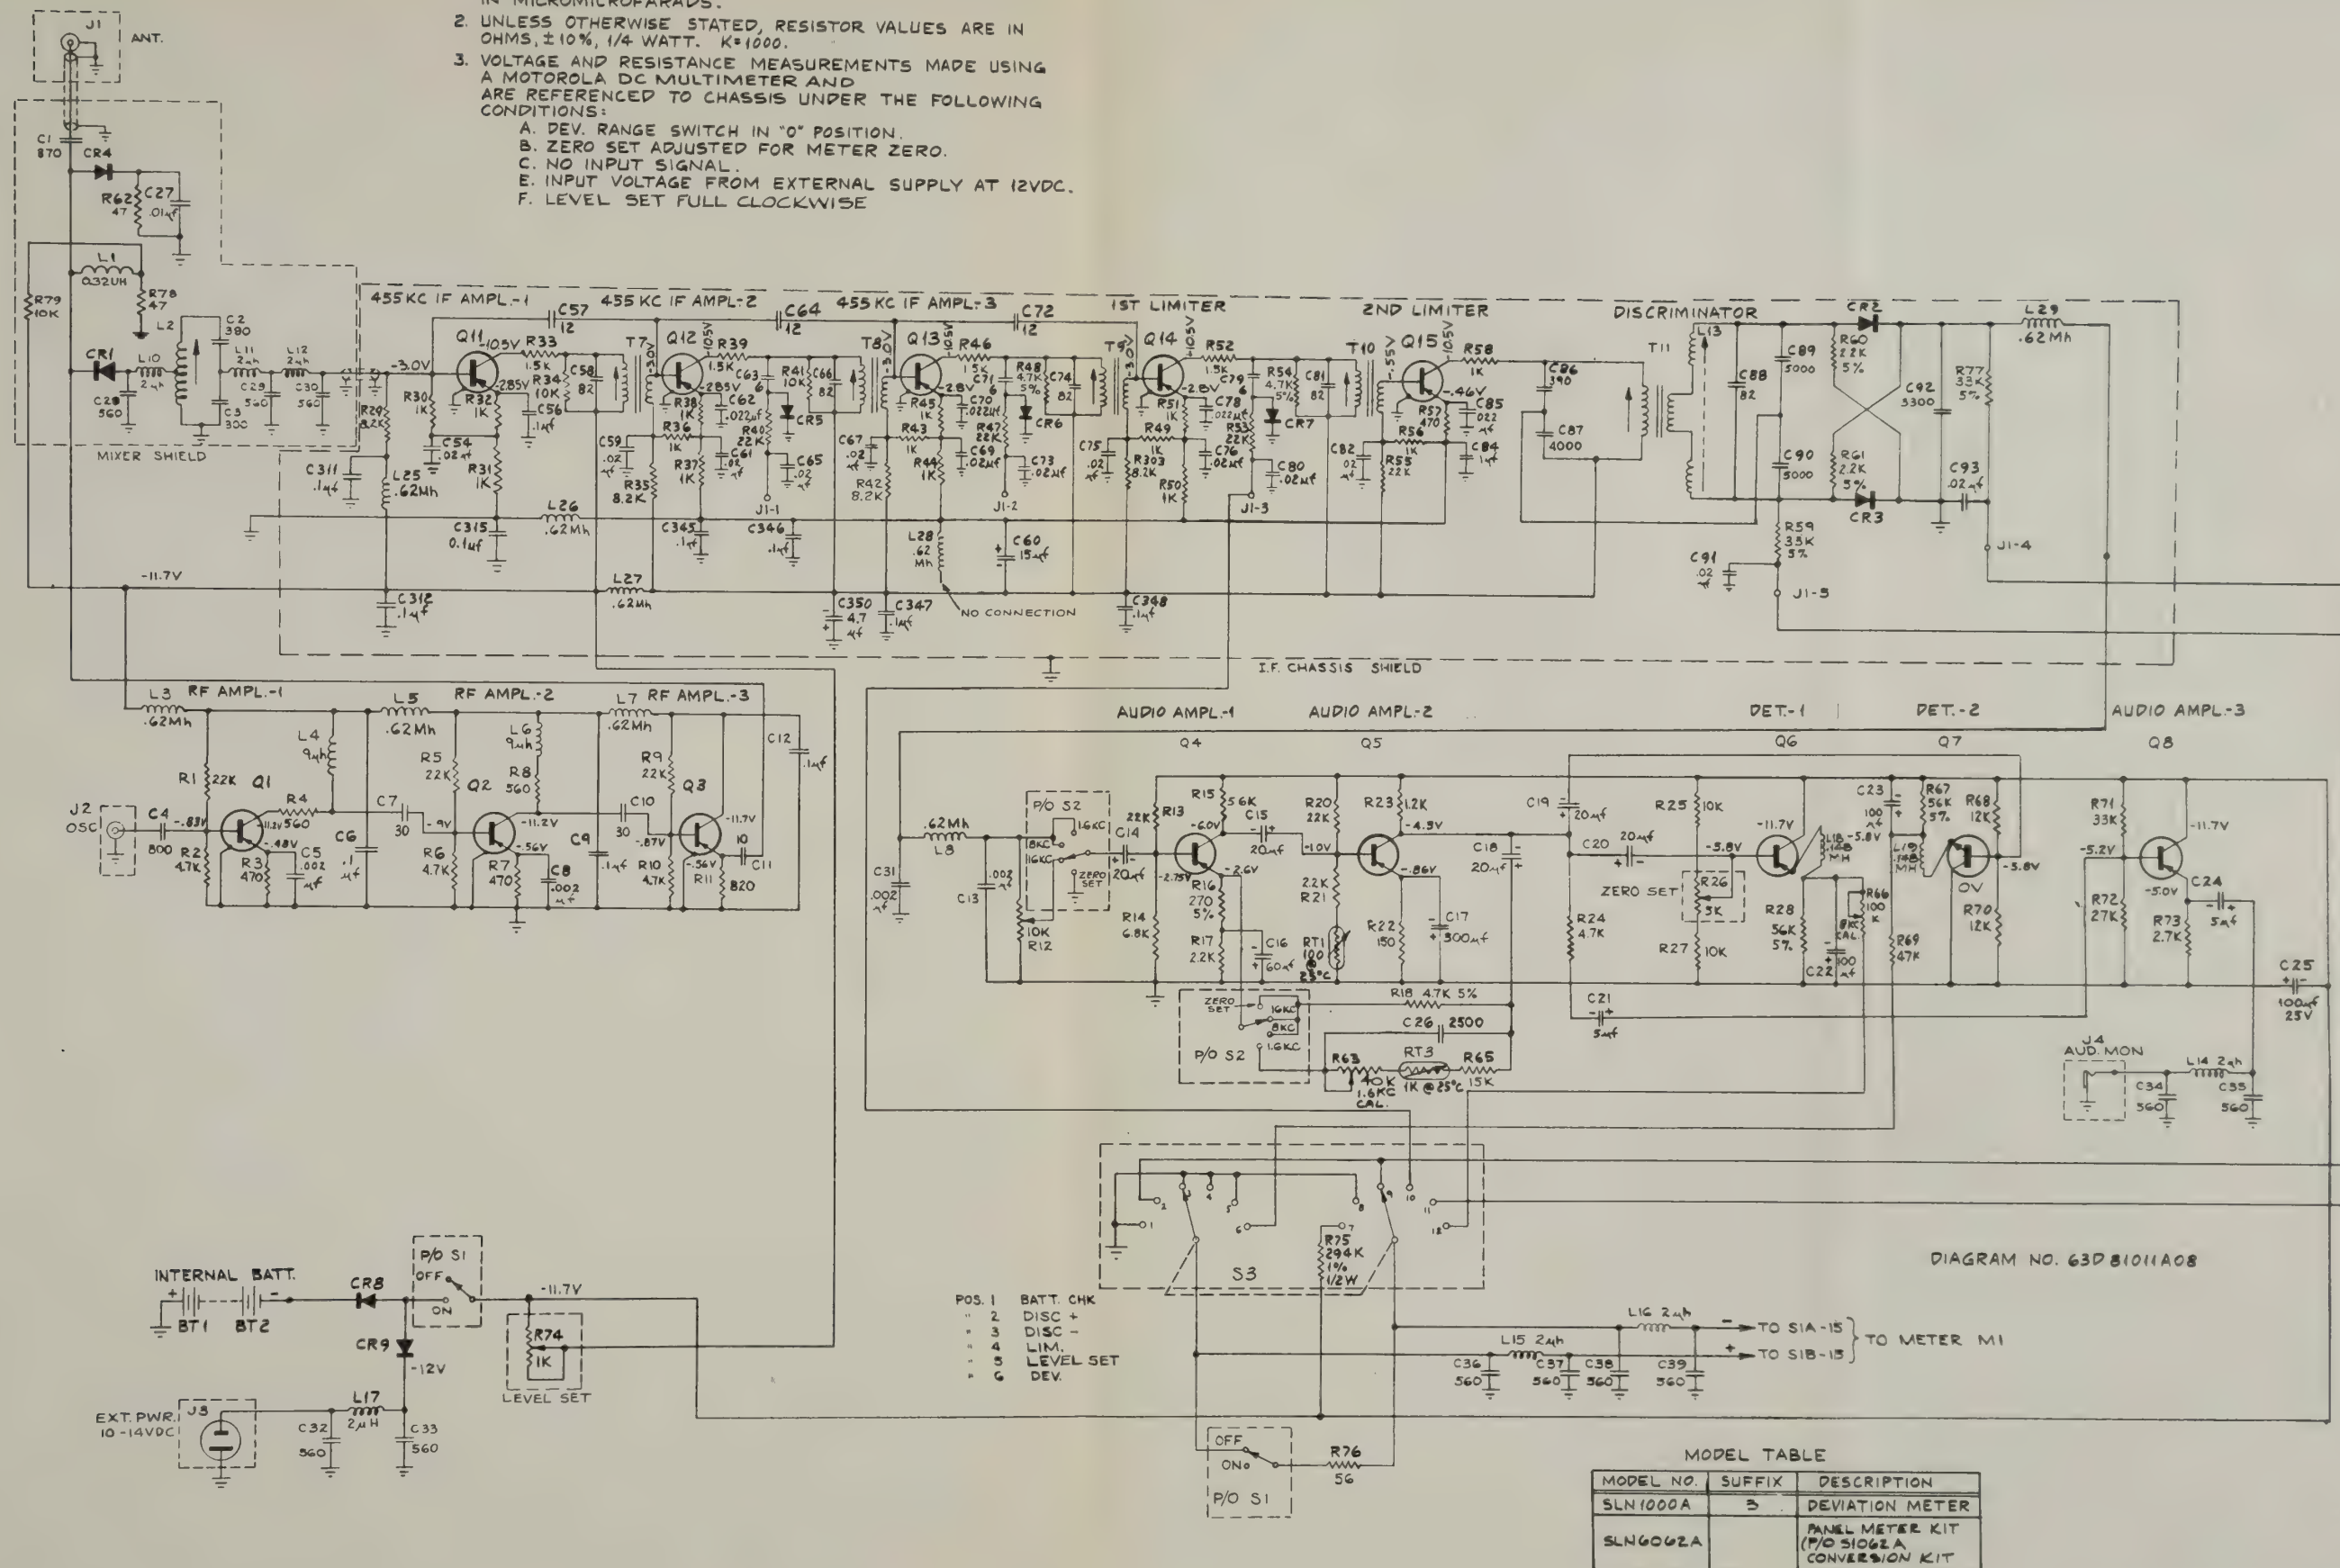

MODEL TABLE

MODEL NO.	SUFFIX	DESCRIPTION
SLN1000A	3	DEVIATION METER
SLN6002A		PANEL METER KIT (P/O 51062A CONVERSION KIT)

PREVIOUS REVISIONS LISTED
ON BACK OF THIS DIAGRAM

SLN1000A Deviation Meter Panel
Schematic Diagram
Motorola No. 63D81011A08-C
12/18/62-UM

	MOTOROLA PART No.	DESCRIPTION
1, 45, 48	8K844261	0.1 uf $\pm 20\%$; 200 v
	21D82204B04	12 $\pm 5\%$; 500 v; NP0
	21D82204B05	82 $\pm 5\%$; 500 v; N2200
	23K865136	15 uf $\pm 20\%$; 25 v
	8K852472	022 uf $\pm 10\%$; 100 v
	21D82204B03	6 ± 0.5 uuf; 500 v; NP0
	21K859945	390 $\pm 5\%$; 500 v
	21K863396	4000 $\pm 1\%$; 500 v
	21K857481	5000 $\pm 5\%$; 100 v
	8K861939	3300 $\pm 10\%$; 100 v
	23K865137	4.7 uf $\pm 20\%$; 25 v
		<u>SEMICONDUCTOR DEVICE,</u> diode: (SEE NOTE)
	48C855216	germanium
	48C82178A01	germanium
		<u>COIL, RF:</u> discriminator; YEL; incl 1K867236 CORE, tuning 0.62 mh; BLK-BRN
	24K861818	
	24K864737	
		<u>TRANSISTOR: (SEE NOTE)</u> P-N-P
	48A134524	
		<u>RESISTOR, fixed: $\pm 10\%$; 1/4 w</u> 8.2K
	6K128686	
	6K127802	1K
	6K127803	1.5K
	6K129225	10K
	6K128685	22K
	6K129669	4.7K $\pm 5\%$
	6K127801	470
	6K129526	33K $\pm 5\%$
	6K129804	2.2K $\pm 5\%$
		<u>TRANSFORMER, IF:</u> GRN; incl 1K867236 CORE, tuning discriminator
	24B859891	
	24C82842D02	

Battery Kit

	60B863919	<u>BATTERY, mercury:</u> 6.5 v; 5 cell
--	-----------	---

Front Panel and Cover Kit

	21C82187B06	<u>CAPACITOR, fixed:</u> 560 uuf $\pm 10\%$; 500 v
		<u>CONNECTOR, receptacle:</u> female; single contact
	9B855268	
	28A812540	male; 2 contact
		<u>JACK, phone:</u> single contact
	9B82138B01	
		<u>COIL, RF:</u> 2 uh
	24A890687	
		<u>RESISTOR, fixed: 1/4 w; unless</u> otherwise stated;
	18B82700D01	var; 5K
	18D82515B01	var; 1K
	6D82475B50	294K $\pm 1\%$; 1/2 w
	6K129860	56 $\pm 10\%$
		<u>SWITCH:</u> toggle; dpdt
	40A80246	
	40C82830D02	rotary; 2 pole; 4 position
	40C82830D01	rotary; 2 pole; 6 position

SLN6080A Attenuator Kit

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
	15A82995D01	HOUSING, attenuator
	15A82993D01	COVER, attenuator housing
	9B855268	CONNECTOR, receptacle: female; single cont; UG-657/U
	28B82992D01	CONNECTOR, receptacle: male; single contact
	6R114018	RESISTOR fixed: 10 $\pm 5\%$; 1/2 w; 2 req'd.
	6R5648	RESISTOR, fixed: 51 $\pm 5\%$; 1/2 w
	29R118191	LUG, soldering
	3S2236	SCREW, machine: #4-40 x 1/8"; 8 req'd.

SKN6007A Cable Kit

	28B844876	CONNECTOR, plug: male; single cont; type BNC; 2 req'd.
	30B475378	CABLE, RF; coaxial; RG-58A/U; 6" req'd.
	28A8201C01	PLUG, phone: male; single contact

SLN6062A Panel Meter Kit (p/o S1062A Conversion Kit only)

	72B82534D01	METER, d-c: 0-50 microamp; multiple scale
--	-------------	--

SAN6000A Antenna

	28B82872D02	CONNECTOR, receptacle: male single contact
	43A82839D01	SPACER, insulator
	1V80724A05	ANTENNA ROD AND BALL ASSY.

NOTE:

Replacement transistors and diodes must be ordered
by Motorola part number only for optimum performance.

REVISIONS				
DIAG. ISSUE	CHASSIS AND SUFFIX NO.	REF. SYMBOL	CHANGE	LOCATION
O1	SLN1000A	C25	WAS 50 uf	AUDIO AMPL. 2,3
		L9	REMOVED 0.62 MH	
		R19	REMOVED 560 OHMS	
		RT2	REMOVED 300 OHMS	
		R78	WAS REF. R75	455 KC INPUT
		R79	WAS REF. R76	
		R77	WAS REF. R62	
				DISCRIMINATOR OUTPUT
		C62	WAS 0.1 uf	
		R48, 54	WERE ±10%	PARTS LIST
		T11	WAS 24C82684D02	
		S2	WAS 40A890763	
		S3	WAS 40K893208	
			ADDED MODELS SLN6080A AND SKN6007A	
A	SLN1000A-1	C33	RELOCATED FROM SGN6000A TO SLN6059A	PARTS LIST
			28B82992D01 (MALE) WAS 9B82992D01 (FEMALE)	
		CR1	WAS 48C82583B01	MIXER SHIELD
			POLARITY TRANSPOSED	
		R63	WAS 18K861480 (100K)	Q5
		R64	REMOVED 6K129226 (100K)	
			ADDED SLN6062A PANEL METER KIT	MODEL TABLE
A1			ADDED SAN6000A ANTENNA COMPONENTS	PARTS LIST
B	SLN1000A-2		METER AMPL. EYELETTED CIRCUIT BOARD REPLACED WITH A PRINTED CIRCUIT BOARD	
C	SLN1000A-3	L18, 19	ADDED 0.148 MH	Q6 AND Q7 EMITTERS

PARTS LIST for Schematic Diagram 63D81011A08-C

SLN6059A Meter Amplifier Board Kit

REFERENCE SYMBOL	MOTOROLA PART No.	DESCRIPTION
		<u>CAPACITOR, fixed: uuf; unless otherwise stated</u>
C1	21K858832	370 ±3%; 500 v
C2	21K859945	390 ±5%; 500 v
C3	21K859944	300 ±5%; 500 v
C4	21K840049	800 ±5%; 300 v
C5, 8	21K837746	.002 uf ±10%; 500 v
C6, 9, 12	21C82372C01	0.1 uf +80-20%; 25 v
C7, 10	21K848156	30 ±5%; 500 v
C11	21K859934	10 ±5%; 500 v
C13, 31	21C855384	.002 uf ±15%; 250 v
C14, 15, 18, 19, 20	23D82601A03	20 uf +100-0%; 25 v
C16	23D82601A02	60 uf +150-10%; 15 v
C17	23D82601A18	300 uf +150-10%; 6 v
C21, 24	23D82601A11	5 uf +33-10%; 25 v
C22, 23, 25	23D82601A09	100 uf +150-10%; 25 v
C26	21K859773	2500 ±5%; 500 v
C27	21K832501	.01 uf +60-40%; 250 v
C28, 29, 30, 33	21C82187B06	560 ±10%; 500 v
		<u>SEMICONDUCTOR DEVICE, diode: (SEE NOTE)</u>
CR1	48D82116E01	silicon; coded RED
CR4	48B811119	germanium
CR8, 9	48C848523	germanium
		<u>COIL, RF:</u>
L1	24A835456	0.32 uh
L2	24C82842D01	inductor
L3, 5, 7, 8	24K847940	0.62 mh
L4, 6	24B847920	9 uh
L10, 11, 12, 14	24A890687	2 uh
L18, 19	24C82190C07	0.148 mh
		<u>TRANSISTOR: (SEE NOTE)</u>
Q1, 2, 3	48R869017	P-N-P
Q4, 5, 6, 8	48A124327	P-N-P
Q7	48A124362	N-P-N
		<u>RESISTOR, fixed: ±10%; 1/4 w; unless otherwise stated</u>
R1, 5, 9, 13, 20	6K128685	22K
R2, 6, 10, 24	6K127804	4.7K
R3, 7	6K127801	470
R4, 8	6K129620	560
R11	6K129432	820
R12	18K864068	var; 10K
R14	6K128687	6.8K
R15	6K129433	5.6K
R16	6K131525	270 ±5%
R17, 21	6K128689	2.2K
R18	6K129669	4.7K ±5%
R22	6K129862	150
R23	6K129235	1.2K
R25, 27, 79	6K129225	10K
R28, 67	6K128684	56K ±5%
R62, 78	6K129233	47
R63	18B82567D02	var; 40K ±20%; 1/8 w
R65	6K127805	15K
R66	18K861480	var; 100K
R68, 70	6K129230	12K
R69	6K128902	47K
R71	6K127807	33K
R72	6K127806	27K
R73	6K128688	2.7K
		<u>THERMISTOR:</u>
RT1	6B859701	100 ±10%; at 25°C
RT3	6B858402	1K ±10%; at 25°C

SLN6058A 455 KC IF Kit

C54, 59, 61, 65, 67, 69, 73, 75, 76, 80, 82, 91, 93	21B82428B01	<u>CAPACITOR, fixed: uuf; unless otherwise stated</u> .02 uf GMV +100%; 100 v
---	-------------	--

REFERENCE SYMBOL	MOTOROLA PART No.	DESCRIPTION
C56, 84, 311, 312, 315, 345, 346, 347, 348	8K844261	0.1 uf ±20%; 200 v
C57, 64, 72	21D82204B04	12 ±5%; 500 v; NP0
C58, 66, 74, 81, 88	21D82204B05	82 ±5%; 500 v; N2200
C60	23K865136	15 uf ±20%; 25 v
C62, 70, 78, 85	8K852472	.022 uf ±10%; 100 v
C63, 71, 79	21D82204B03	6 ±0.5 uuf; 500 v; NP0
C86	21K859945	390 ±5%; 500 v
C87	21K863396	4000 ±1%; 500 v
C89, 90	21K857481	5000 ±5%; 100 v
C92	8K861939	3300 ±10%; 100 v
C350	23K865137	4.7 uf ±20%; 25 v
		<u>SEMICONDUCTOR DEVICE, diode: (SEE NOTE)</u>
CR2, 3	48C855216	germanium
CR5, 6, 7	48C82178A01	germanium
		<u>COIL, RF:</u>
L13	24K861818	discriminator; YEL; incl 1K867236 CORE, tuning 0.62 mh; BLK-BRN
L25, 26, 27, 28, 29	24K864737	
		<u>TRANSISTOR: (SEE NOTE)</u>
Q11, 12, 13, 14, 15	48A134524	P-N-P
		<u>RESISTOR, fixed: ±10%; 1/4 w</u>
R29, 35, 42, 303	6K128686	8.2K
R30, 31, 32, 36, 37, 38, 43, 44, 45, 49, 50, 51, 56, 58	6K127802	1K
R33, 39, 46, 52	6K127803	1.5K
R34, 41	6K129225	10K
R40, 47, 53, 55	6K128685	22K
R48, 54	6K129669	4.7K ±5%
R57	6K127801	470
R59, 77	6K129526	33K ±5%
R60, 61	6K129804	2.2K ±5%
		<u>TRANSFORMER, IF:</u>
T7, 8, 9, 10	24B859891	GRN; incl 1K867236 CORE, tuning discriminator
T11	24C82842D02	

SLN6046A Battery Kit

BT1, 2	60B863919	<u>BATTERY, mercury:</u> 6.5 v; 5 cell
--------	-----------	---

SGN6000A Front Panel and Cover Kit

C32, 34, 35, 36, 37, 38, 39	21C82187B06	<u>CAPACITOR, fixed:</u> 560 uuf ±10%; 500 v
		<u>CONNECTOR, receptacle:</u>
J1, 2	9B855268	female; single contact
J3	28A812540	male; 2 contact
		<u>JACK, phone:</u>
J4	9B82138B01	single contact
		<u>COIL, RF:</u>
L15, 16, 17	24A890687	2 uh
		<u>RESISTOR, fixed: 1/4 w; unless otherwise stated;</u>
R26	18B82700D01	var; 5K
R74	18D82515B01	var; 1K
R75	6D82475B50	294K ±1%; 1/2 w
R76	6K129860	56 ±10%
		<u>SWITCH:</u>
S1	40A80246	toggle; dpdt
S2	40C82830D02	rotary; 2 pole; 4 position
S3	40C82830D01	rotary; 2 pole; 6 position

SLN6080A Attenuator Kit

REFERENCE SYMBOL	MOTOROLA PART NO.	DESCRIPTION
	15A82995D01	HOUSING, attenuator
	15A82993D01	COVER, attenuator housing
	9B855268	CONNECTOR, receptacle: female; single cont; UG-657/U
	28B82992D01	CONNECTOR, receptacle: male; single contact
	6R114018	RESISTOR fixed: 10 ±5%; 1/2 w; 2 req'd.
	6R5648	RESISTOR, fixed: 51 ±5%; 1/2 w
	29R118191	LUG, soldering
	3S2236	SCREW, machine: #4-40 x 1/8"; 8 req'd.

SKN6007A Cable Kit

	28B844876	CONNECTOR, plug: male; single cont; type BNC; 2 req'd.
	30B475378	CABLE, RF: coaxial; RG-58A/U; 6" req'd.
	28A8201C01	PLUG, phone: male; single contact

SLN6062A Panel Meter Kit (p/o S1062A Conversion Kit only)

	72B82534D01	METER, d-c: 0-50 microamp; multiple scale
--	-------------	---

SAN6000A Antenna

	28B82872D02	CONNECTOR, receptacle: male single contact
	43A82839D01	SPACER, insulator
	1V80724A05	ANTENNA ROD AND BALL ASSY.

NOTE:

Replacement transistors and diodes must be ordered by Motorola part number only for optimum performance.

